Parts Manual for

SNAPPER®

LT16 SERIES 1 TRACTORS

& MOWER ATTACHMENTS

IT IS THE POLICY OF SNAPPER TO IMPROVE ITS PRODUCTS WHENEVER IT IS POSSIBLE AND PRACTICAL TO DO SO. WE RESERVE THE RIGHT TO MAKE CHANGES OR ADD IMPROVEMENTS AT ANY TIME WITHOUT INCURRING ANY OBLIGATION TO MAKE SUCH CHANGES ON PRODUCTS MANUFACTURED PREVIOUSLY.

SNAPPER®McDonough, GA., 30253 U.S.A.

COPYRIGHT © 1997
SNAPPER INC.
ALL RIGHTS RESERVED

(1/97 ISSUE)

MANUAL No. 06214

LT16 SERIES TRACTOR AND MOWER PARTS

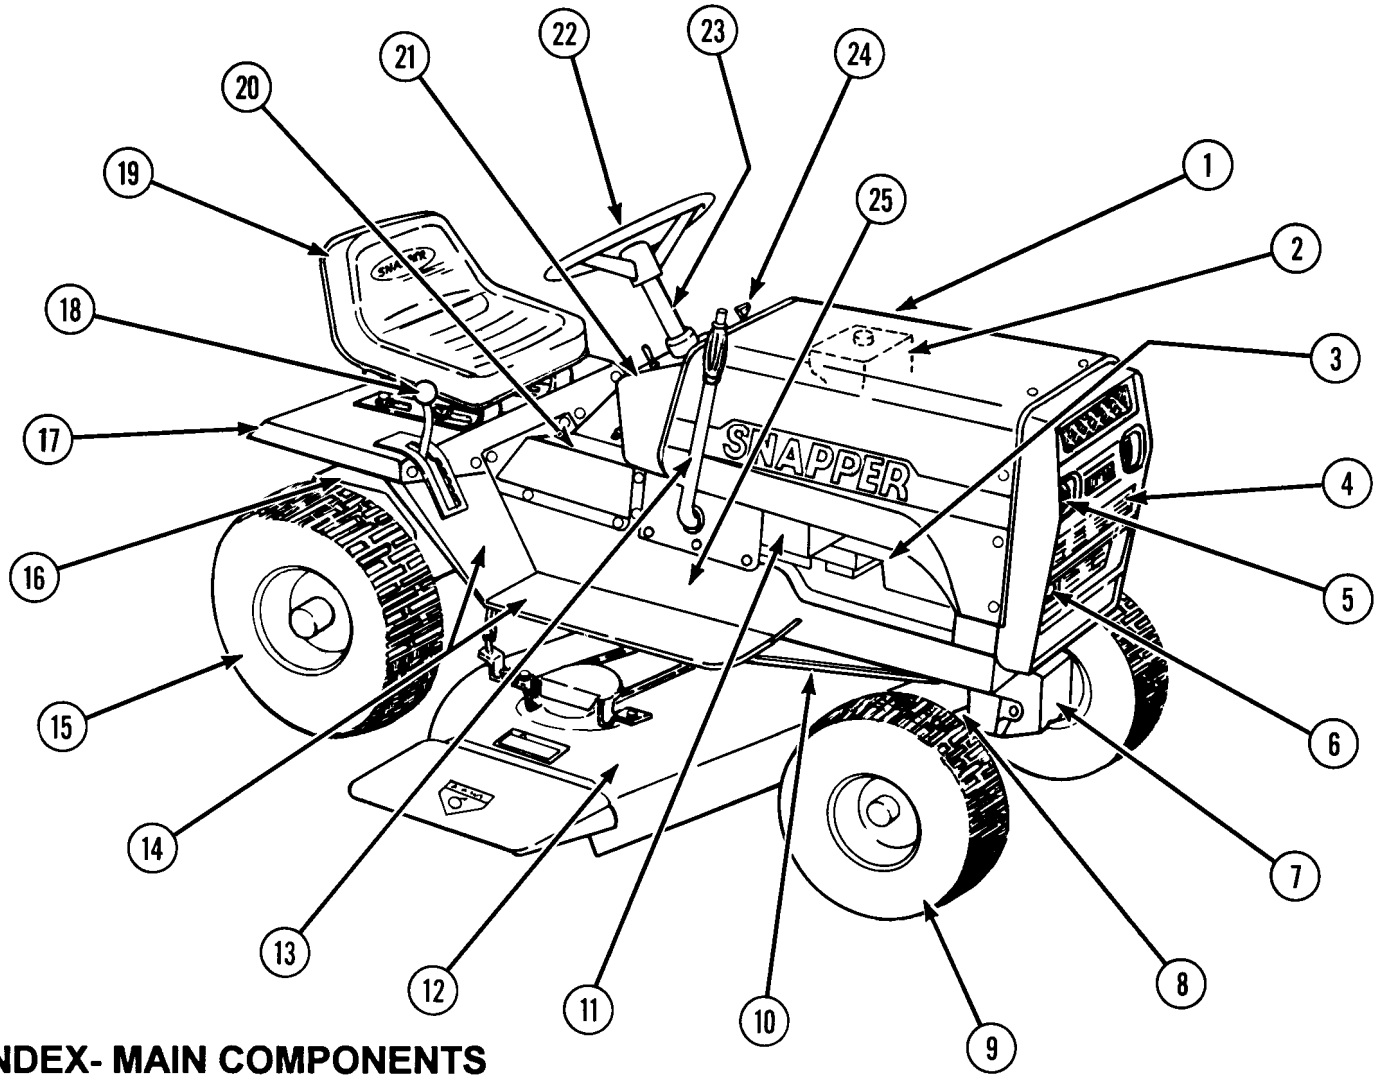

INDEX- MAIN COMPONENTS

ITEM	DESCRIPTION	PAGE
1	HOOD	3
2	FUEL SYSTEM	4
3	ENGINE	8 & 9
4	GRILLE	3
5	HEAD LAMPS	3 & 20
6	EXHAUST	8
7	MULE DRIVE	30
8	FRONT AXLE	14
9	FRONT WHEELS	21
10	BELTS, MOWER	24 & 26
11	BATTERY	20
12	MOWERS (33")	24 & 25
12	MOWERS (41")	26 & 27
12	MOWERS (48")	28 & 29
13	INPLEMENT LIFT	22

ITEM	DESCRIPTION	PAGE
14	STEP PLATES, PANELS	10 & 11
15	REAR WHEELS	21
16	TRANSMISSION, AXLE	6,16,18,19
17	REAR FENDER	10
18	CONTROLS (BRAKE/CLUTCH)	12 & 13
19	SEAT	10
20	CENTER COVER	8
21	DASH PANEL	5
22	STEERING WHEEL	14 & 15
23	STEERING MECHANISM	14 & 15
24	CHOKE AND THROTTLE CONTROLS	4 & 5
25	CHASSIS, FRAME PARTS	8 & 9
26	THATCHERIZER	32 & 33
27	DOZER (42")	34 & 35
28	REAR WEIGHT KIT	36

LT SNOW THROWER PARTS SHOWN IN MANUAL No. *06314*

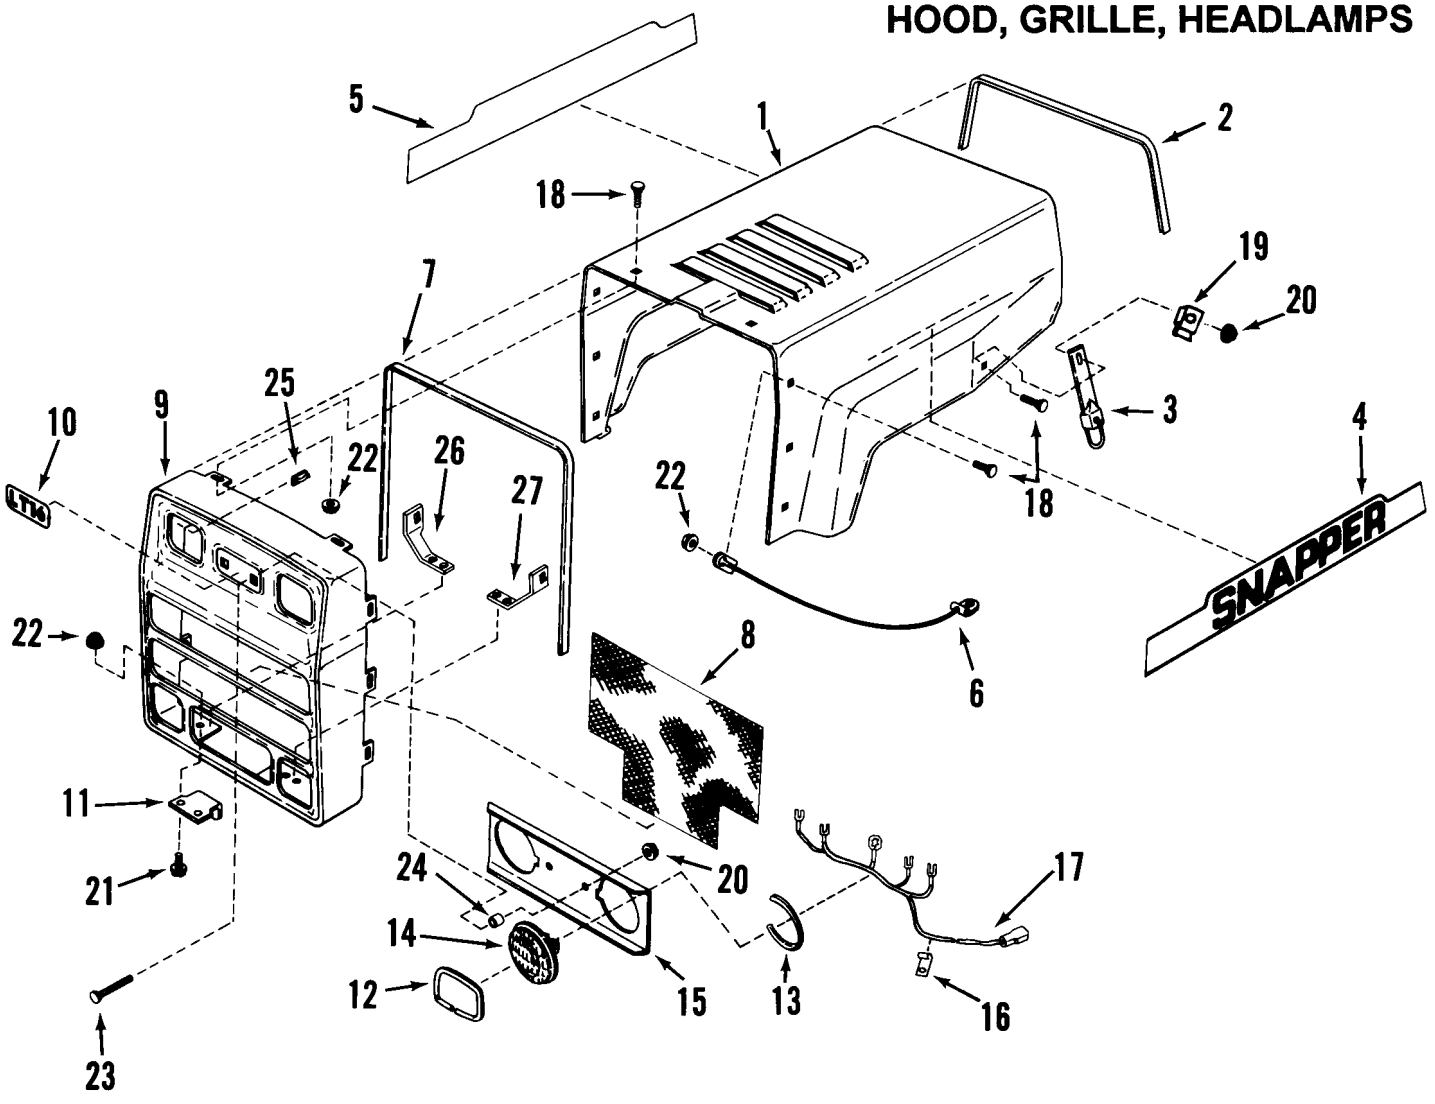

ITEM	PART NO.	DESCRIPTION
1	3-5047	HOOD, LT16 Series Tractor
2	1-4814	TRIM, Rear Edge Hood
3	1-8254	LATCH, Hood Retaining (2)
4	1-9984	DECAL, SNAPPER (Left Side)
5	1-9983	DECAL, SNAPPER (Right Side)
6	1-2674	CABLE, Hood Stop
7	1-4815	GASKET, Grille
8	3-6117	MESH, Grille
9	3-5049	GRILLE
10	1-4816	DECAL, LT16
11	3-2398	HINGE, Hood (2)
12	1-2651	GASKET, Head Lamp (3)
13	1-2650	GASKET, Head Lamp to Bracket (2)
14	1-8415	HEAD LAMP (2)
15	3-8083	BRACKET, Head Lamp
16	1-2652	CLIP, Wiring Harness (2)
17	1-9529	HARNESS, Head Lamp Wiring
18	9-0803	BOLT, 1/4-20 x 5/8" Flat Head Carriage (10)
19	3-2444	CLIP, Hood Retainer (2)
20	9-0477	NUT, 1/4-20 Hex Flange Lock, Grade 5 (5)
21	9-0596	BOLT, 1/4-20 x 5/8" Hex Flange Lock, Grade 5 (4)
22	9-0583	NUT, 1/4-20 Hex Flange Lock, Grade 5 (12)
23	9-0865	BOLT, 1/4-20 x 1-1/4" Flat Head Carriage (2)
24	1-4874	SPACER (2)
25	1-2691	CLIP
26	3-8157	BRACE, Grille- R.H.
27	3-8158	BRACE, Grille- L.H.

FUEL TANK, PEDESTAL, DASH & HOLD DOWNS

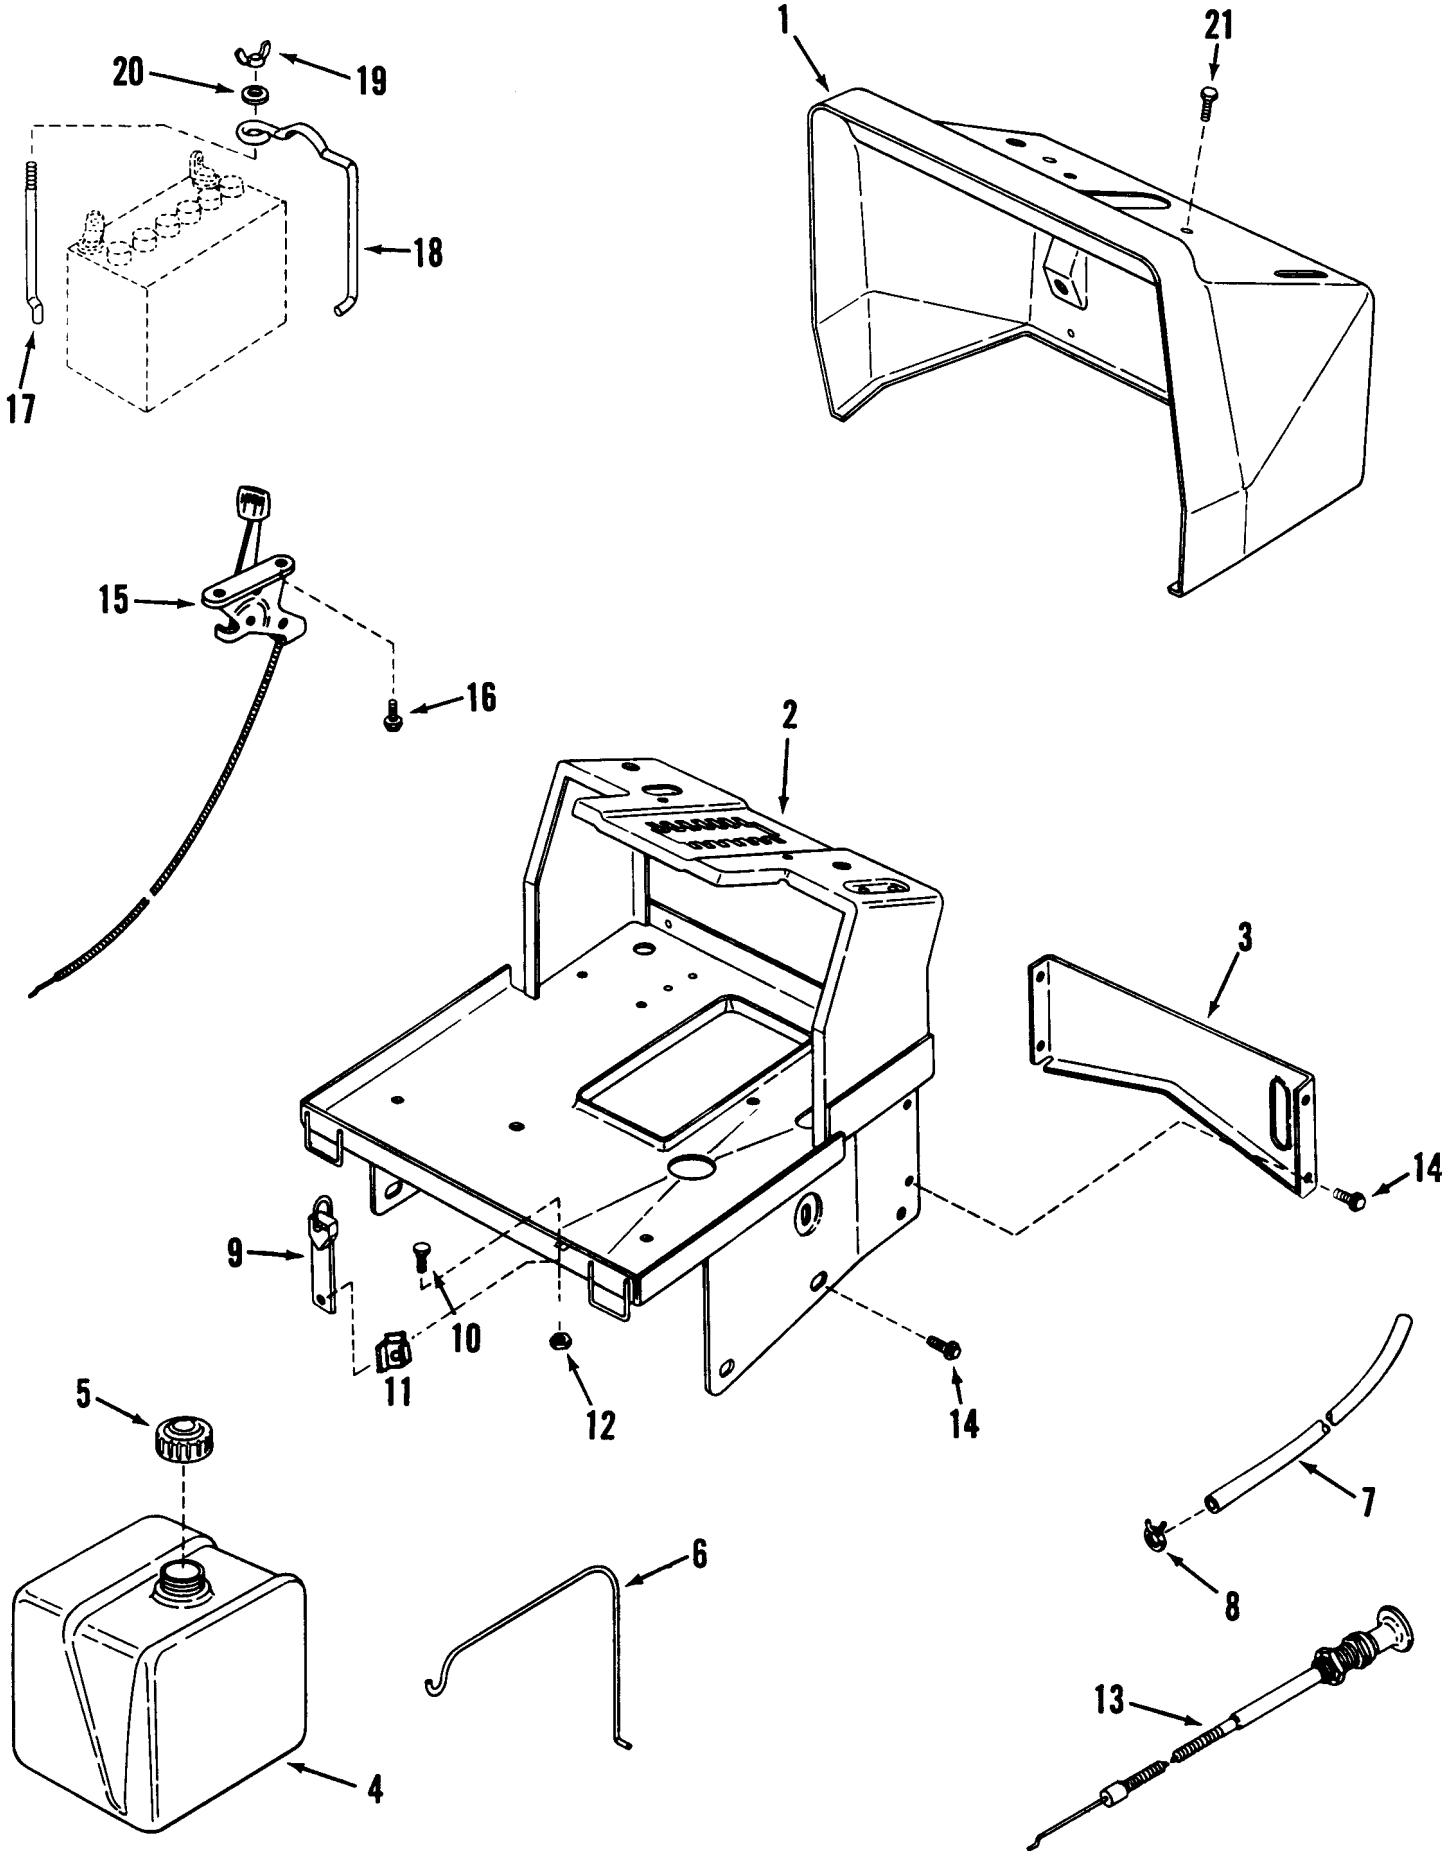

ITEM	PART NO.	DESCRIPTION
1	1-9958	PANEL, Dash
2	4-9943	PEDESTAL
3	3-8143	BRACKET, Lower Dash
4	5-7334	TANK, Fuel (Includes item 7)
5	1-4363	CAP, Fuel Tank Filler
6	1-8624	HOLD-DOWN, Fuel Tank
7	1-2912	LINE, Fuel (12-1/2" Long)
8	1-1137	CLAMP, Fuel Line (2)
9	1-8254	STRAP, Tank Hold Down
10	9-0803	BOLT, 1/4-20 x 5/8" Flat Head Carriage, Grade 2
11	3-2444	CLIP, Hood Retainer
12	9-0477	NUT, 1/4-20 Hex Flange Lock, Grade 5
13	1-8674	CONTROL, Choke Cable (29")
14	9-0361	SCREW, 5/16-18 x 5/8" Hex Washer Self-Tap (10)
15	1-8675	CONTROL, Throttle (27-3/4")
16	9-0307	SCREW, #10-24 x 1/2" Hex Washer Self-Tap (2)
17	3-2296	HOLD-DOWN, Battery
18	1-4434	CLAMP, Battery
19	9-0311	WING-NUT, 1/4-20
20	9-0055	WASHER, 1/4 Flat
21	9-0853	SCREW, #10-24 x 1/2" Hex Washer Self-Tap
--	6-0677	DECAL SET- French
--	6-0678	DECAL SET- German
--	6-0679	DECAL SET- Italian
--	6-0680	DECAL SET- Spanish

DRIVE DISC, REAR AXLE COMPONENTS

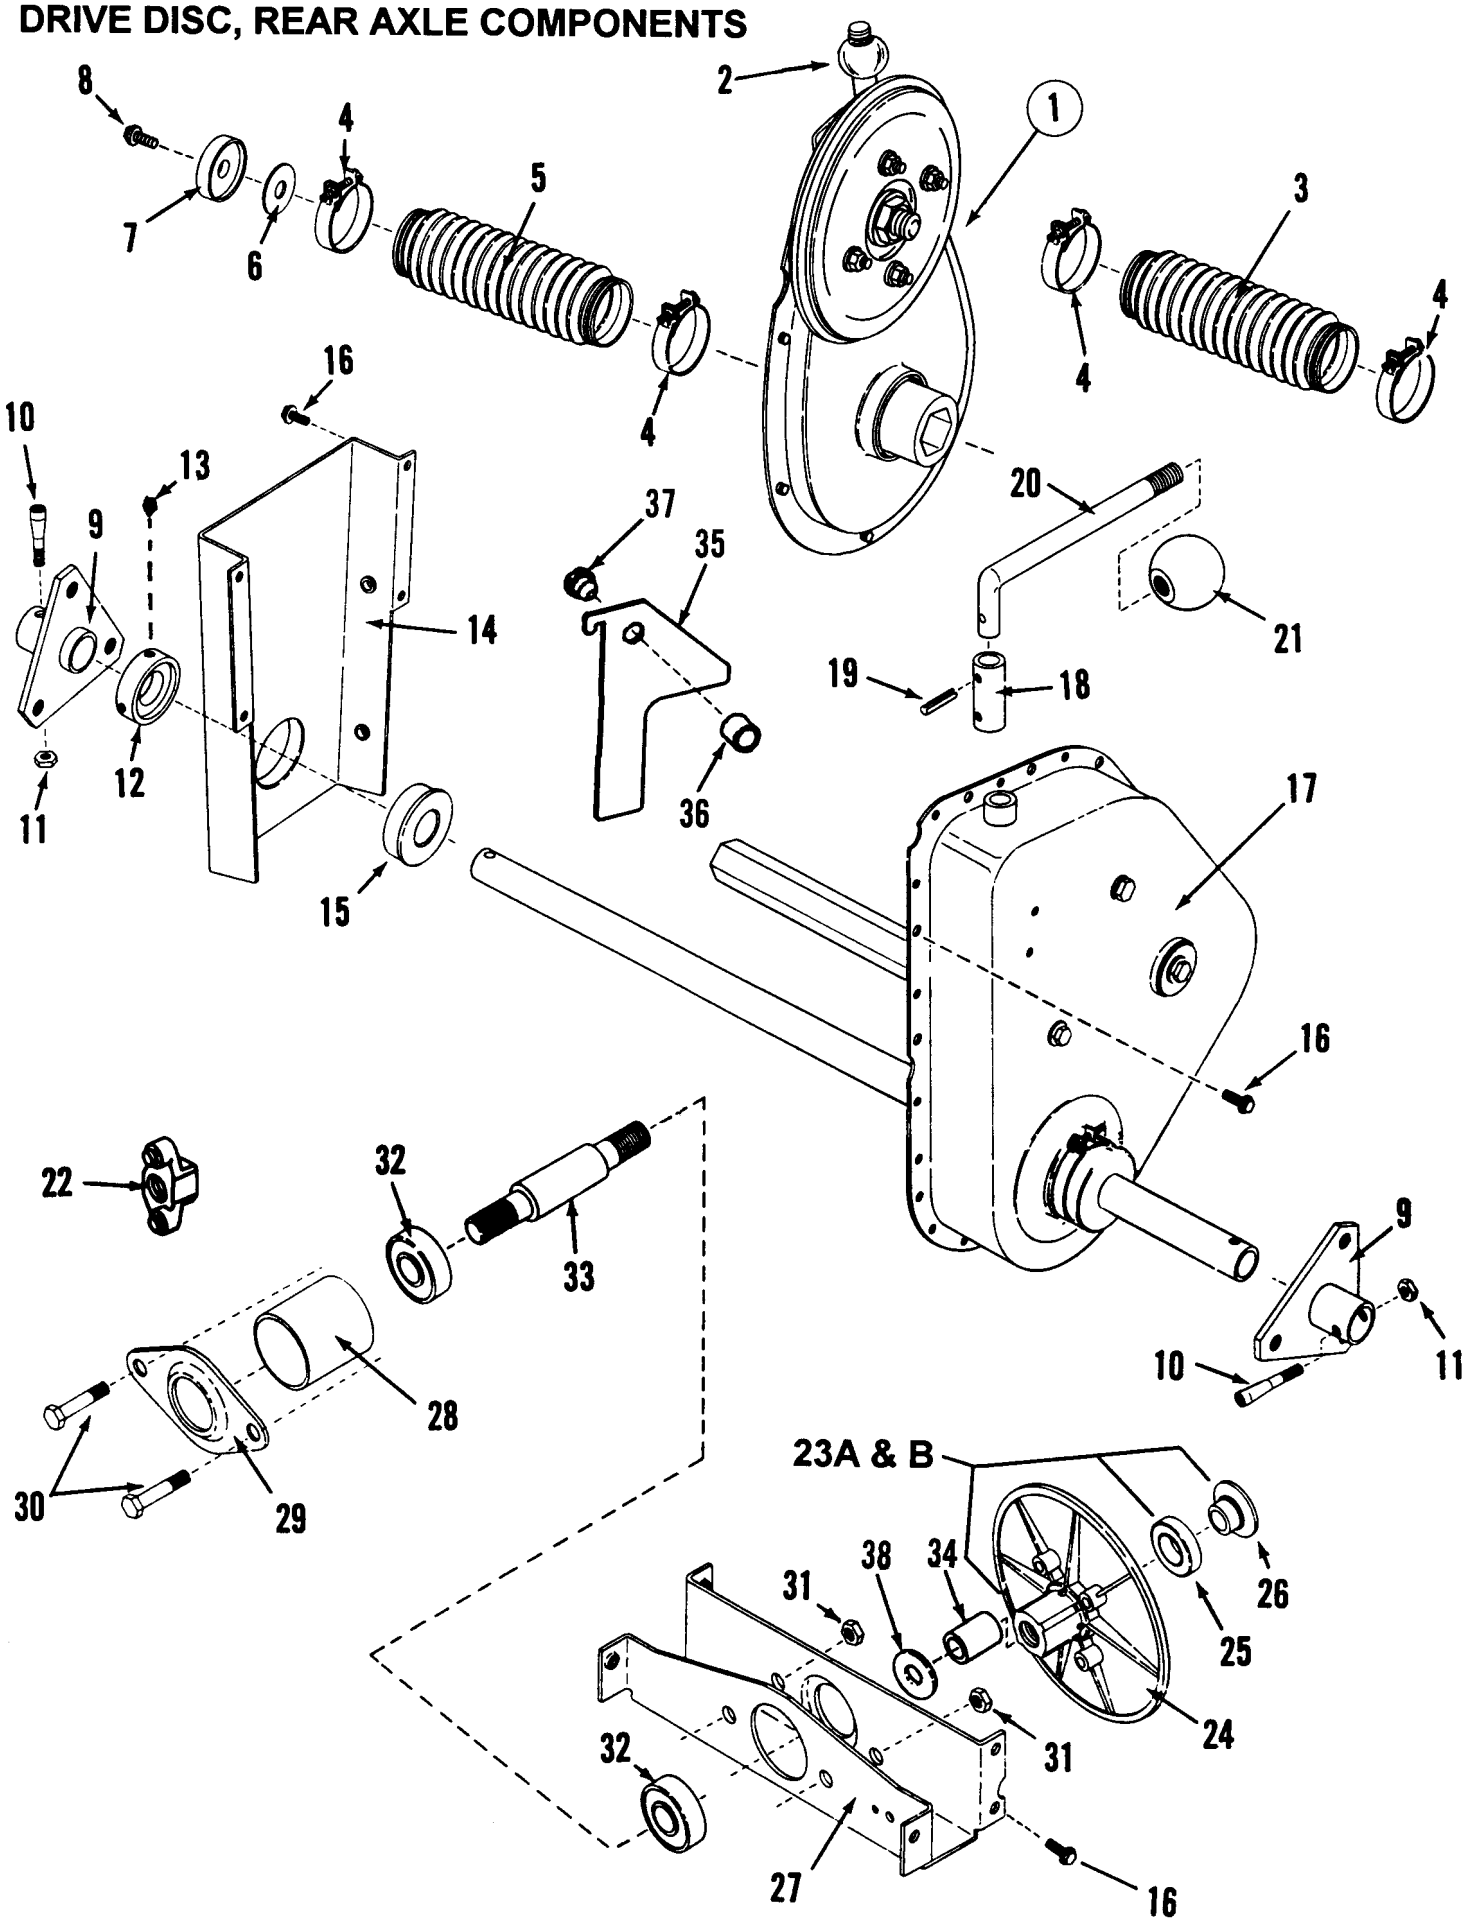

ITEM	PART NO.	DESCRIPTION
1	5-9639	PRIMARY CASE (See page 18 for parts breakdown)
2	1-4396	BUSHING, Primary Clutchl
3	1-8660	BOOT, Left Side Oil seal
4	1-1037	CLAMP, Boot (4)
5	1-1011	BOOT, Right Side Oil Seal
6	3-2255	WASHER, Thrust
7	1-4326	SPACER, Hex Tube
8	9-0324	SCREW, 3/8-16 x 1" Hex Washer Self-Tap
9	4-0433	HUB, Rear Wheel (2)
10	1-1013	BOLT, Tapered (2)
11	1-1201	NUT, 5/16-24 Hex Lock (2)
12	1-4401	LOCK-COLLAR (Includes item 13)
13	9-0201	SETSCREW, 5/16-18 x 5/16" (2)
14	5-7328	ASSEMBLY, Axle Support (includes item 15)
15	1-4400	BEARING, Ball
16	9-0361	SCREW, 5/16-18 x 5/8" Hex Washer Self-Tap (18)
17	5-9830	ASSEMBLY, Transmission (See page 16-17 for parts breakdown)
18	2-1903	COUPLING, Shift Lever
19	9-0844	ROLL-PIN, 3/16 x 3/4" (2)
20	3-2308	LEVER, HI-LO Shifter
21	1-4501	KNOB, Shifter Ball
22	1-8584	HUB, Flex Coupling (See page 8)
23	5-1418	ASSEMBLY, Drive Disc (includes items 24 thru 26)
24	1-8567	DISC, Drive
25	1-4514	BEARING, Ball
26	1-4447	BUTTON, Center
27	3-6085	SUPPORT, Bearing (Latest version requires items 32 & 33)
28	2-1943	TUBE (Use with item 27)
29	3-2396	RETAINER (Use with item 27)
30	9-0553	SCREW, 5/16-18 x 3" Hex Head (2)
31	9-0184	NUT, 5/16-18 Hex Center Lock Grade B or 5 (2)
32	1-3313	BEARING, Ball (2)
33A	2-1909	SPINDLE, Drive Disc 5.040" Long
33B	2-1956	SPINDLE, Drive Disc (1985) 6.040" Long
34	2-1955	SPACER, Drive Disc, 1"
35*	3-8177	GAUGE PLATE, Disc Adjustment
36*	2-1954	EXTENSION, Shaft
37*	1-4982	PLUG, Plastic 5/8-18
--	6-0663	KIT, Drive Disc Gauge (Includes 1-4983 instruction and items markes with *)
38	1-0121	WASHER, Shim (if necessary)

FRAME, ENGINE & DRIVE PARTS

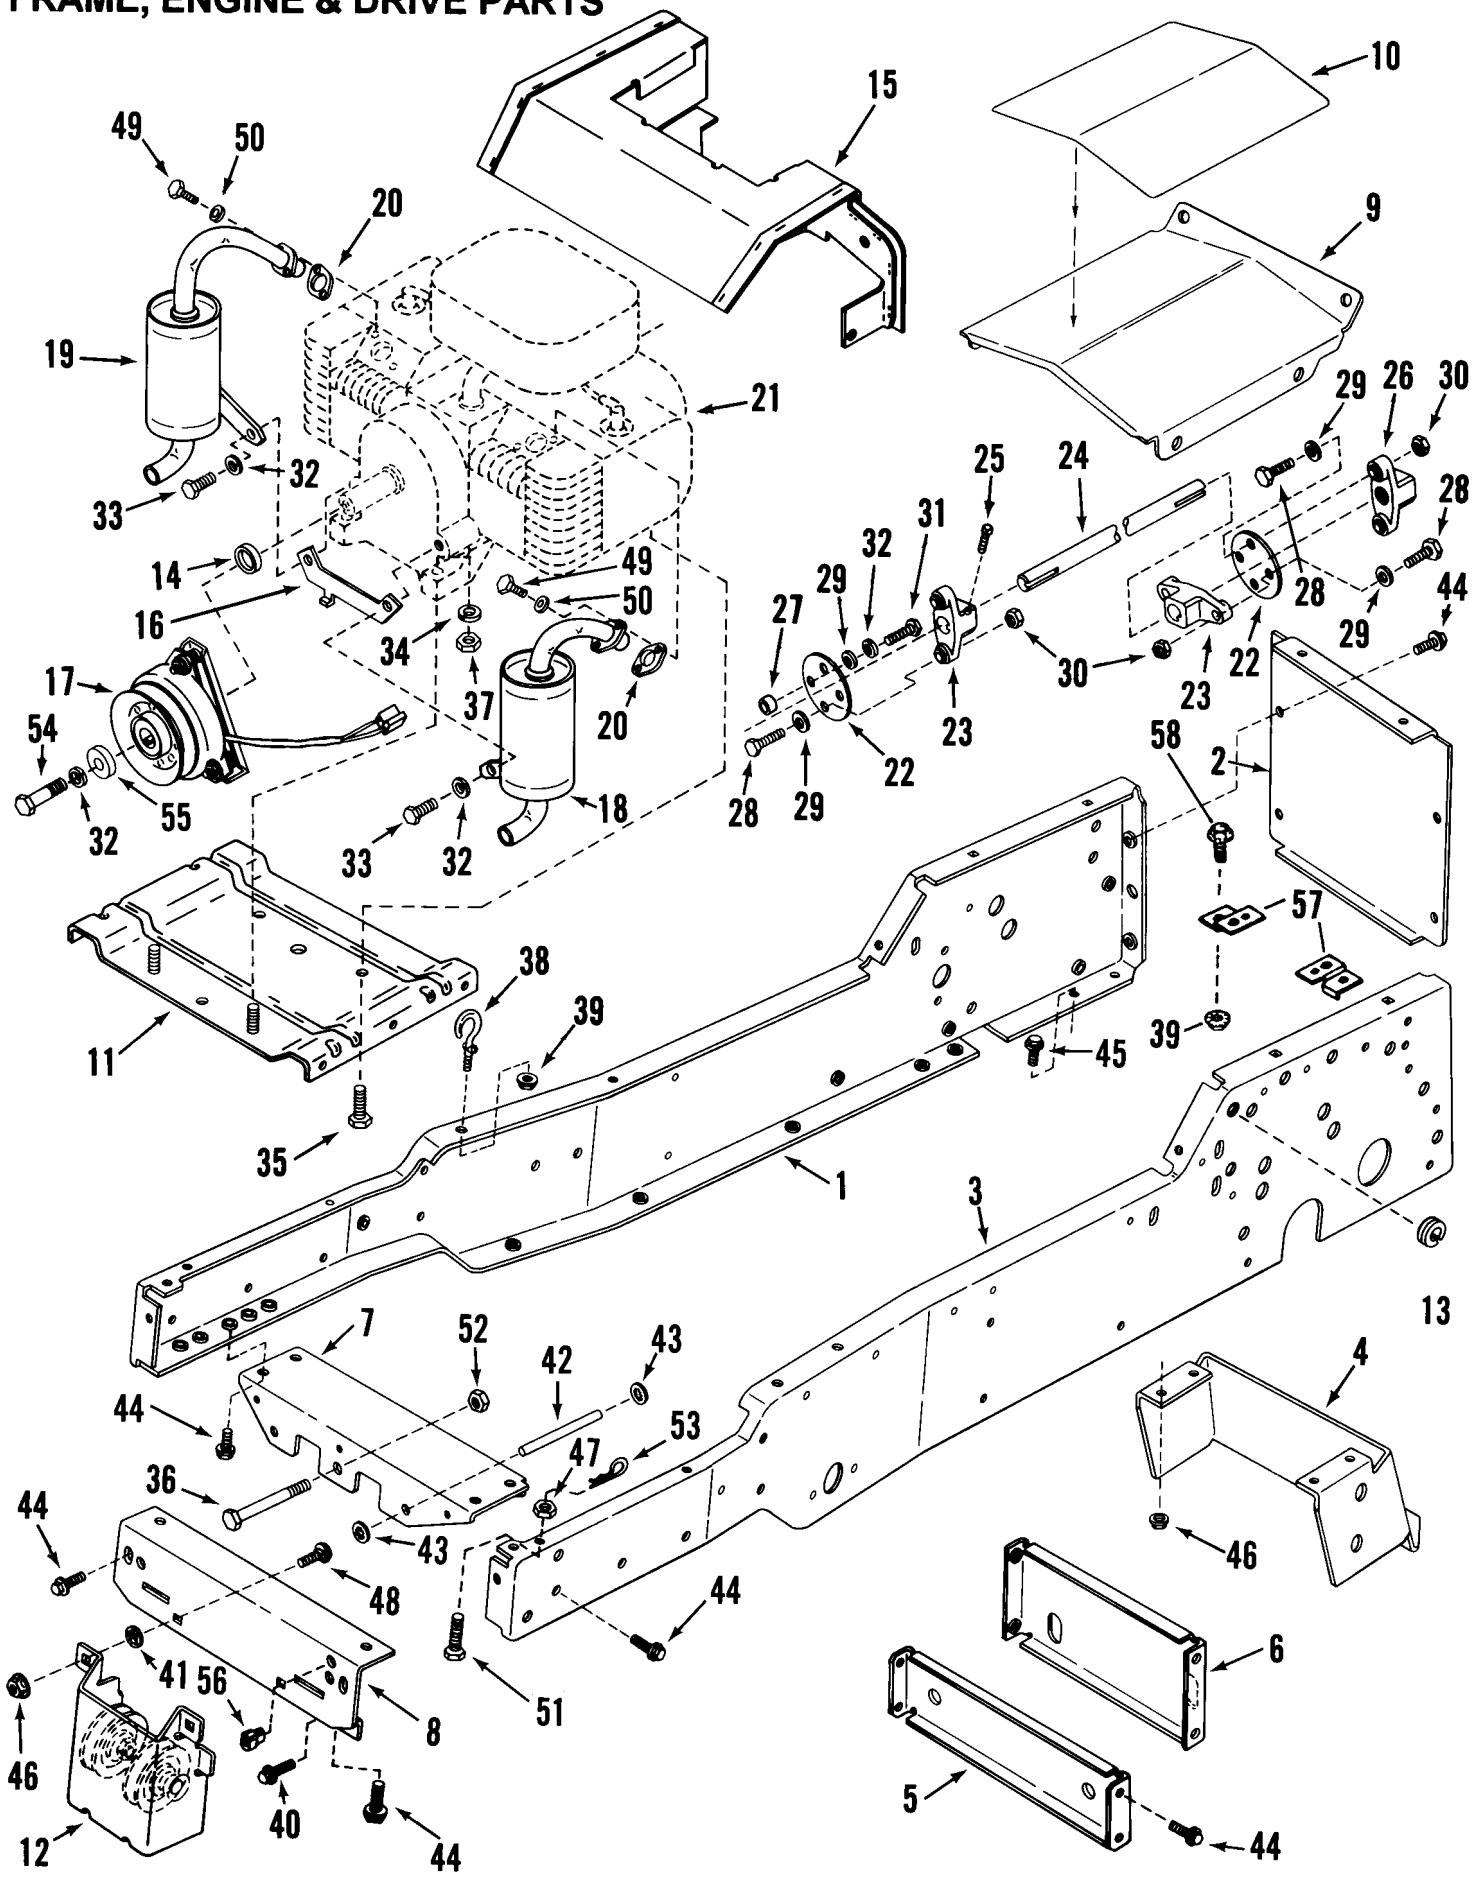

ITEM	PART NO.	DESCRIPTION
1A	3-5052	CHANNEL, R. H. Frame
1B	5-7374	CHANNEL, R. H. Frame '85
2A	3-6070	PLATE, Rear Cover
2B	3-8185	PLATE, Rear Cover '85
3A	3-5051	CHANNEL, L.H. Frame
3B	5-7373	CHANNEL, L.H. Frame '85
4	3-5029	DRAWBAR
5	3-6078	BRACE, Forward
6	3-6079	BRACE, Rear Cross
7	3-8051	CHANNEL, Front Axle Support
8	5-9868	A'SSY, Front Plate
9	3-6067	COVER, Console
10	1-9744	DECAL, Console Cover
11	5-7342	BASE, Engine
12	5-7362	ASSEMBLY, Mule Drive (see page 30 for breakdown)
13	1-4856	GROMMET, Split
14	2-1960	SPACER, Clutch, LT16
15	5-9637	ASS'Y, Heat Shield
16	3-2447	BRACKET, Clutch Retainer
17	5-3679	KIT, Electric Clutch (See page 31 for breakdown)
18	1-9741	MUFFLER, B&S 16HP Engine LH
19	1-9742	MUFFLER, B&S 12HP Engine RH
20	1-4802	GASKET, Exhaust (2)
21	00050	ENGINE, Briggs Mod 402417, Type 0609-01*
22	1-4338	DISC, Flex Coupling (2)
23	1-8626	HUB, Flex Coupling (2)
24	2-1944	SHAFT, Drive (22.62 x .75)
25	9-0848	SET-SCREW, 5/16-18 x 1/2" (4)
26	1-8584	HUB, Flexible Coupling (Threaded center)
27	1-4803	SPACER, Flexible Coupling (2)
28	9-0138	SCREW, 3/8-16 x 1" HHC (6)
29	3-2070	WASHER, 3/8 Flat (8)
30	9-0546	NUT, 3/8-16 Hex Center Lock (6)

ITEM	PART NO.	DESCRIPTION
31	9-0143	SCREW, 3/8-16 x 1-1/4" Hex Head Cap, Grade 5 (2)
32	9-0118	WASHER, 3/8 Split Lock (2)
33	9-0603	SCREW, 3/8-16 x 7/8" Hex Head Cap(2)
34	9-0187	WASHER, 5/16 Split Lock (4)
35	9-0324	SCREW, 3/8-16 x 1" Hex Head Self-Tap (2)
36	9-0826	SCREW, 1/2-20 x 4" Hex Head Cap, Grade 5
37	9-0196	NUT, 5/16-18 Hex (4)
38	1-4438	HOOK, Hood Latch (2)
39	9-0585	NUT, 5/16-18 Hex Flange Lock (4)
40	9-0362	SCREW, 1/4-20 x 5/8" Hex Washer Self-Tap
41	1-3847	RETAINER, 3/8 Bolt
42	3-2298	STOP, Axle (2)
43	1-3946	RETAINER, 3/8 Shaft (4)
44	9-0361	SCREW, 5/16-18 x 5/8" Hex Washer Self-Tap (36)
45	9-0612	BOLT, 3/8-16 x 3/4" Hex Flange Lock (4)
46	9-0613	NUT, 3/8-16 Hex Fl. Lock (4)
47	9-0578	NUT, 1/4-20 Hex Top Lock Jam (2)
48	9-0850	BOLT, 3/8-16 x 3/4" Square Neck Carriage (2)
49	9-0072	SCREW, 1/4-20 x 5/8" Hex Hex Head Cap (4)
50	9-0052	WASHER, 1/4 Split Lock (4)
51	2-1784	BOLT, 1/4-20 Hex Head Drilled
52	9-0393	NUT, 1/2-20 Hex Nyloc
53	1-2431	PIN, 1/4 Hair
54	9-0523	SCREW, 3/8-24 x 1-5/8" Hex Cap, Grade 5
55	3-2011	WASHER, Pull Bar
56	1-4804	RELIEF, Strain
57	3-2433	BRACKET, Rear Fender Mounting. (2)
58	9-0208	BOLT, 5/16-18 x 1" Hex Flange Lock Bolt (2)

*Purchase engine parts, other than those shown here, from Briggs & Stratton Service outlet.

SEAT, STEP PANELS & REAR FENDER

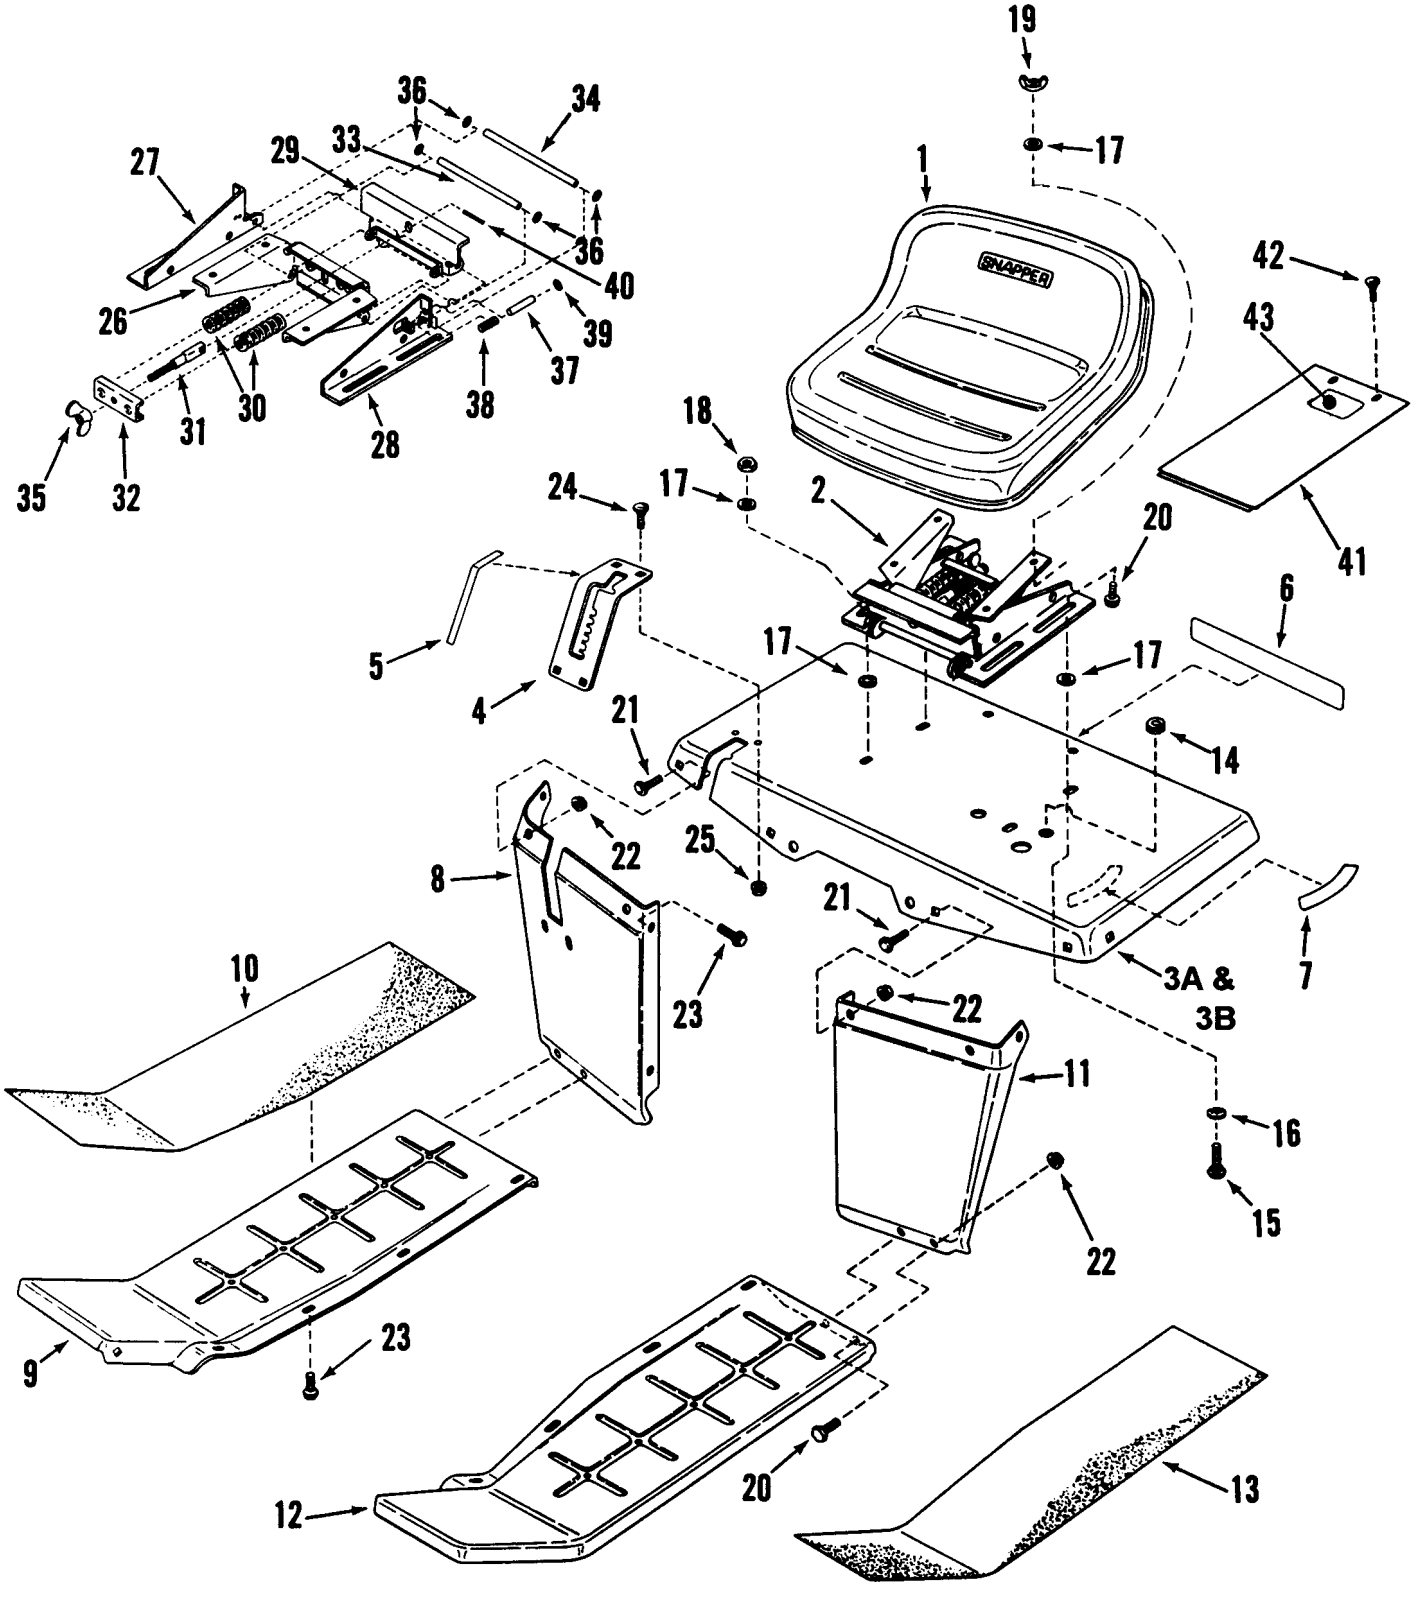

SEAT, STEP PANELS & REAR FENDER

ITEM	PART NO.	DESCRIPTION
1	1-9964	SEAT, Operator's
2	5-9841	ASSEMBLY, Seat Suspension (Includes Items 26 thru 40)
3A	3-9930	FENDER, Rear (2" from shift handle to wire hole)
3B	3-5071	FENDER, Rear w/access hole (1" from shift handle to wire hole)
4	3-8089	DETENT, Shift
5	1-4506	DECAL, Speed Shift
6	1-8593	DECAL, SNAPPER
7	1-4505	DECAL, HI-LOW RANGE (Shift)
8	3-9932	EXTENSION, Right Side Fender
9	3-5016	PANEL, Right Side Step
10	1-8602	TREAD, Right Side (Non-Skid)
11	3-9931	EXTENSION, Left Side Fender
12	3-5015	PANEL, Left Side Step
13	1-8603	TREAD, Left Side (Non-Skid)
14	1-4856	GROMMET, Split
15	9-0208	BOLT, 5/16-18 x 1" Square Neck Carriage (4)
16	1-1791	RETAINER, 5/16 Bolt (4)
17	1-3848	WASHER, 5/16 (8)
18	9-0184	NUT, 5/16-18 Hex Center Lock, Grade B or 5 (2)
19	1-4848	WING-NUT, 5/16-18
20	9-0721	BOLT, 5/16-18 x 1/2" Hex Flange Lock, Grade 5 (8)
21	9-0731	BOLT, 5/16-18 x 1/2" Short Neck Carriage, Grade 5 (6)
22	9-0585	NUT, 5/16-18 Hex Flange Lock, Grade 5 (10)
23	9-0361	SCREW, 5/16-18 x 5/8" Self-Tap (14)
24	9-0005	BOLT, 1/4-20 x 1/2" Short Neck Carriage, Grade 5 (4)
25	9-0583	NUT, 1/4-20 Hex Flange Lock (4)
26	4-9720	WELDMENT, Seat Hinge
27	3-6119	ANGLE, L.H. Mounting
28	3-6118	ANGLE, R.H. Mounting
29	4-7838	WELDMENT, Seat Hinge
30	1-4845	SPRING, Seat (2)
31	1-4844	ROD, Adjusting
32	3-2399	RETAINER, Spring
33	2-1947	PIN, Seat Tilt Hinge
34	2-1948	PIN, Seat Tilt Hinge
35	1-4850	WING-NUT, 1/2-13
36	1-3946	PUSHNUT, 3/8 (4)
37	2-1946	PLUNGER
38	1-4846	SPRING, Compression
39	1-4849	RING, Retaining
40	9-0843	GROOVED PIN, 3/16 x 1-3/4"
41	3-8186	COVER, Access
42	9-0858	SCREW, 5/16-18 x 1/2" Hex Washer Self-Tap (2)
43	1-4921	DECAL, Seat Adjust

CLUTCH, BRAKE & TRANSMISSION CONTROLS

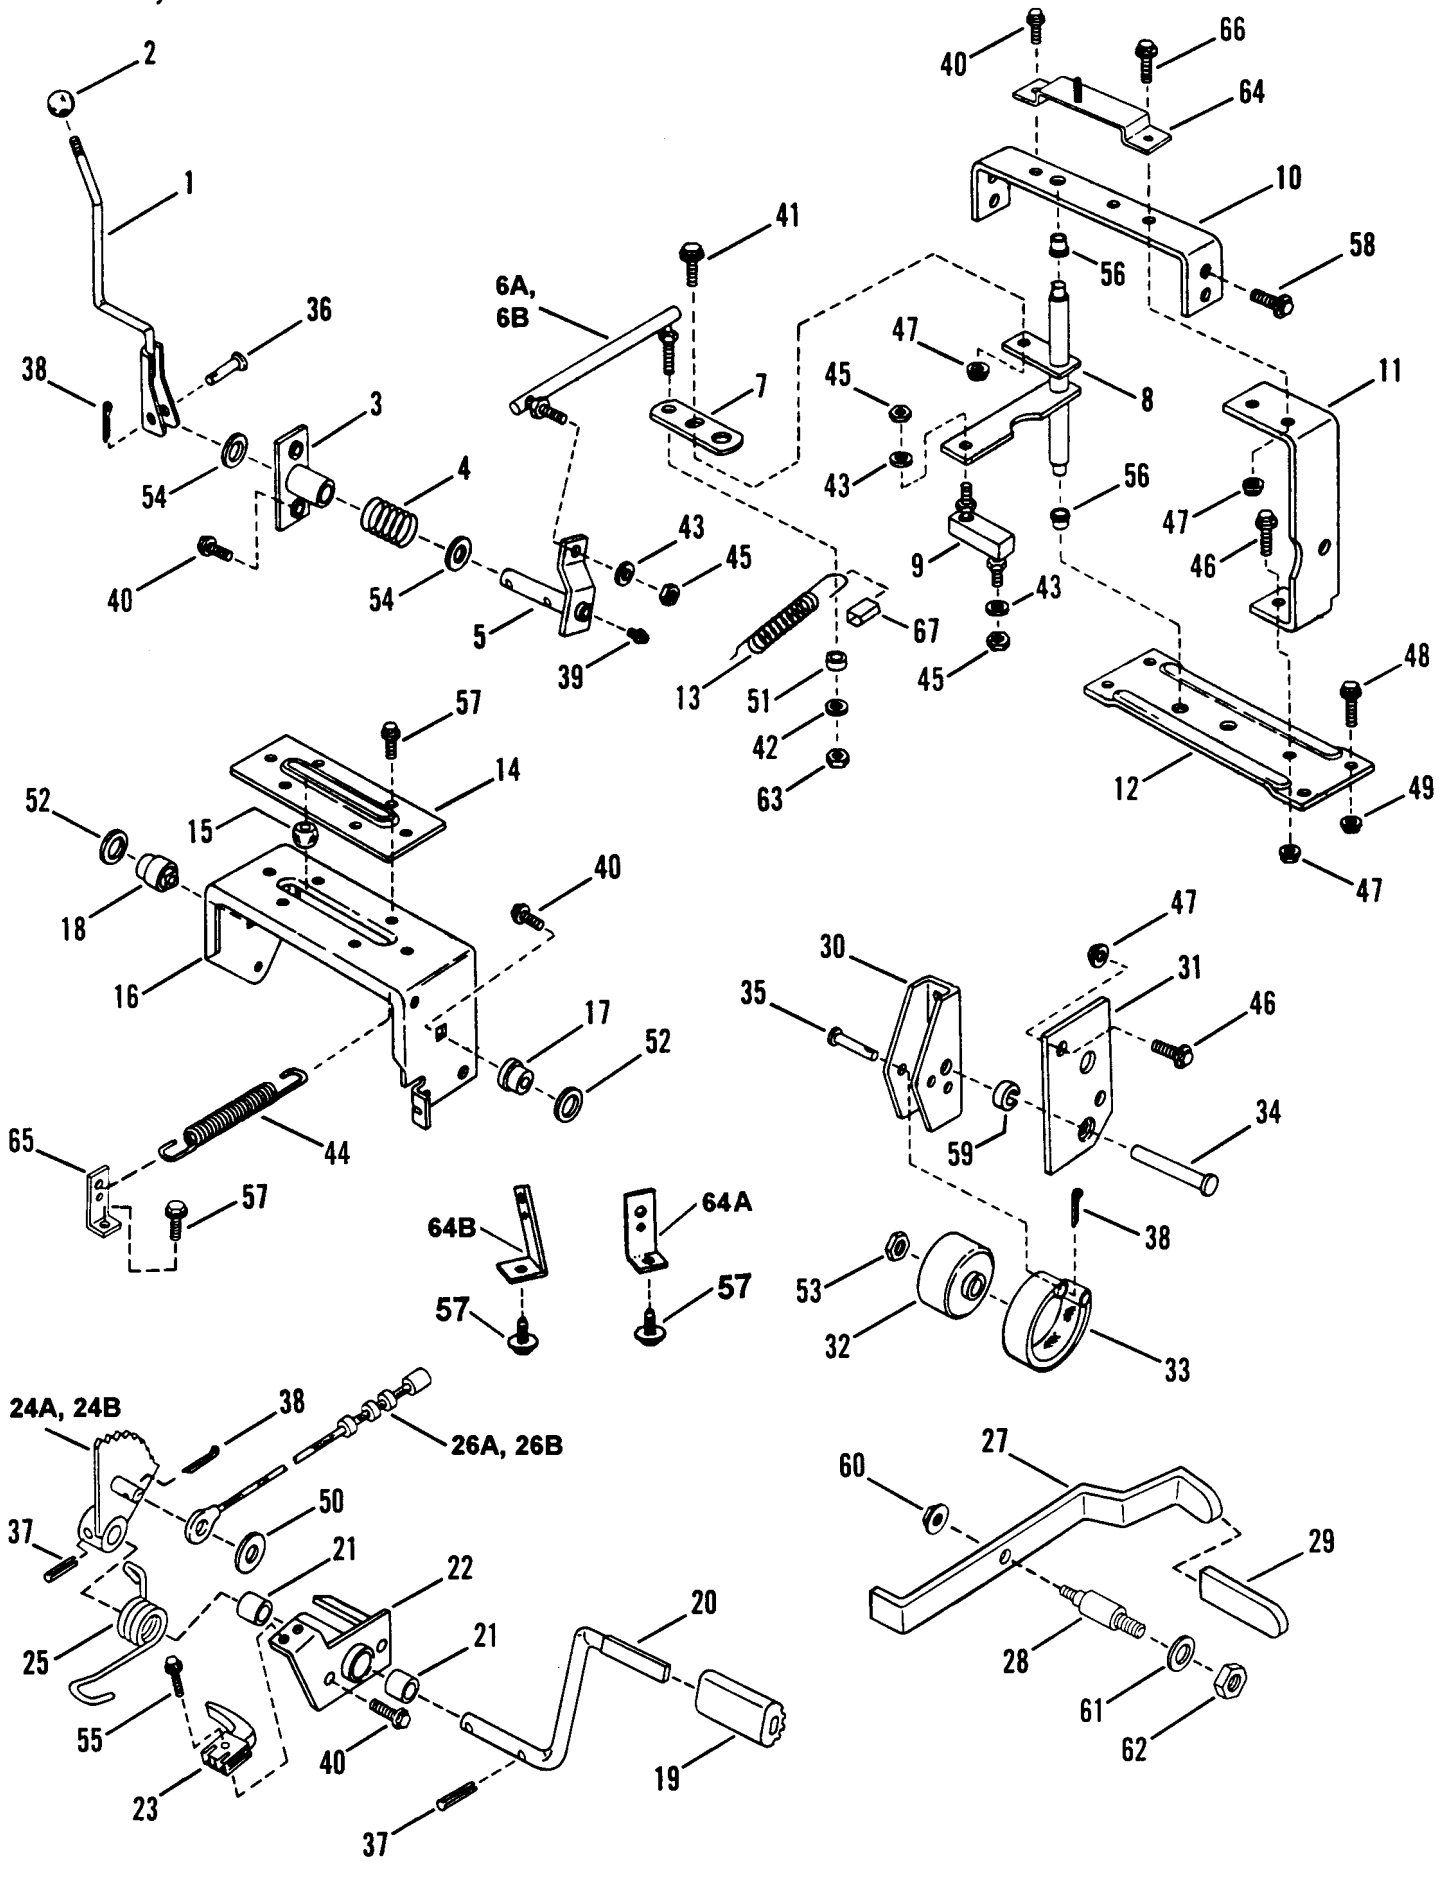

ITEM	PART NO.	DESCRIPTION
1	4-0494	SHIFTER, Transmission
2	1-4501	KNOB, Shifter
3	4-0486	PIVOT, Shift
4	1-4442	SPRING, Shift Detent
5	5-1428	ARM, Shifter (Incl. Item 39)
6A	1-4441	LINK, Shift-Long (8.53")
6B	1-5018	LINK, Shift-Long (9.53")('85)
7	3-2257	ARM, Shift Adjusting
8	4-7828	ARM, Shift
9	1-4337	LINK, Shift-Short
10	3-8046	STRAP, Upper Cross
11	3-8100	STRAP, Brake Pivot Support
12	3-8084	STRAP, Lower Cross
13	1-4528	SPRING, Reverse Assist (15 Coils)
14	3-2315	RETAINER (PLATE), Clutch Yoke Bushing
15	1-4396	BUSHING, Clutch Ball
16	3-6077	YOKE, Clutch
17	1-4327	BUSHING, Yoke Pivot-Short
18	1-4328	BUSHING, Yoke Pivot-Long
19	1-2661	PAD, Pedal
20	3-6086	PEDAL, Clutch Brake
21	1-4435	BEARING, Sleeve (2)
22	5-1483	BRACKET, Pedal Pivot (Includes two item 21)
23	1-8524	SWITCH, Clutch Interlock
24A	4-0514	ARM, Clutch/Brake
24B	1-8669	ARM, Clutch/Brake
25	1-4752	SPRING, Clutch/Brake
26A	1-8659	CABLE, Clutch/Brake (34.54")
26B	1-8711	CABLE, Clutch/Brake 1985 (35.54")
27	3-8142	LEVER, Parking Brake
28	1-4754	STUD, Parking Brake
29	1-4755	SLEEVE, Parking Brake
30	3-2324	LEVER, Brake Pivot
31	3-2335	SUPPORT, Brake Pivot
32	4-0493	DRUM, Brake
33	5-7340	BAND, Brake
34	1-4539	PIN, 3/8 x 2-9/16" Clevis
35	1-4538	PIN, 1/4 x 1-13/16" Clevis
36	1-0121	PIN, 3/8 x 1-1/4" Clevis
37	1-3878	ROLL-PIN, 3/16 x 1-1/4" (2)
38	9-0037	PIN, 3/32 x 3/4" Cotter (2)
39	1-3324	FITTING, Lube
40	9-0361	SCREW, 5/16-18 x 5/8" Hex Flange Self-Tap
41	9-0606	BOLT, 5/16-18 x 5/8" Hex Flange Lock
42	9-0188	WASHER, 5/16 SAE
43	9-0187	WASHER, 5/16 Split Lock
44	1-4659	SPRING
45	9-0223	NUT, 5/16-24 Hex
46	9-0595	BOLT, 5/16-18 x 3/4" Hex Flange Lock.
47	9-0585	NUT, 5/16-18 Hex Flange Lock, Grade 5
48	9-0612	BOLT, 3/8-16 x 3/4" Hex Flange Lock
49	9-0613	NUT, 3/8-16 Hex Flange Lock
50	9-0122	WASHER, 3/8 SAE Flat
51	1-1968	ROLLER, Shift Arm
52	1-0935	WASHER, Shim (2)
53	9-0356	JAM-NUT, 5/8-18
54	3-1036	WASHER, Thrust
55	9-0849	SCREW, #10-24 x 1" Self-Tap
56	1-1016	BEARING, Nylon (2)
57	9-0539	SCREW, 1/4-20 x 1/2" Hex Flange Self-Tap (5)
58	9-0506	SCREW, 3/8-16 Hex Flange Self-Tap
59	1-1780	RING
60	9-0477	NUT, 1/4-20 Small Flange Lock
61	9-0390	WASHER, 3/8 Internal Tooth Lock
62	9-0130	NUT, 3/8-16 Hex, Grade 5
63	9-0222	NUT, 5/16-24 Hex Center Lock
64A	3-2440	CLIP, Spring Attach
64B	3-2446	CLIP, Spring Attach
65	6-0694	KIT, Yoke Spring Tension

STEERING & FRONT AXLE PARTS

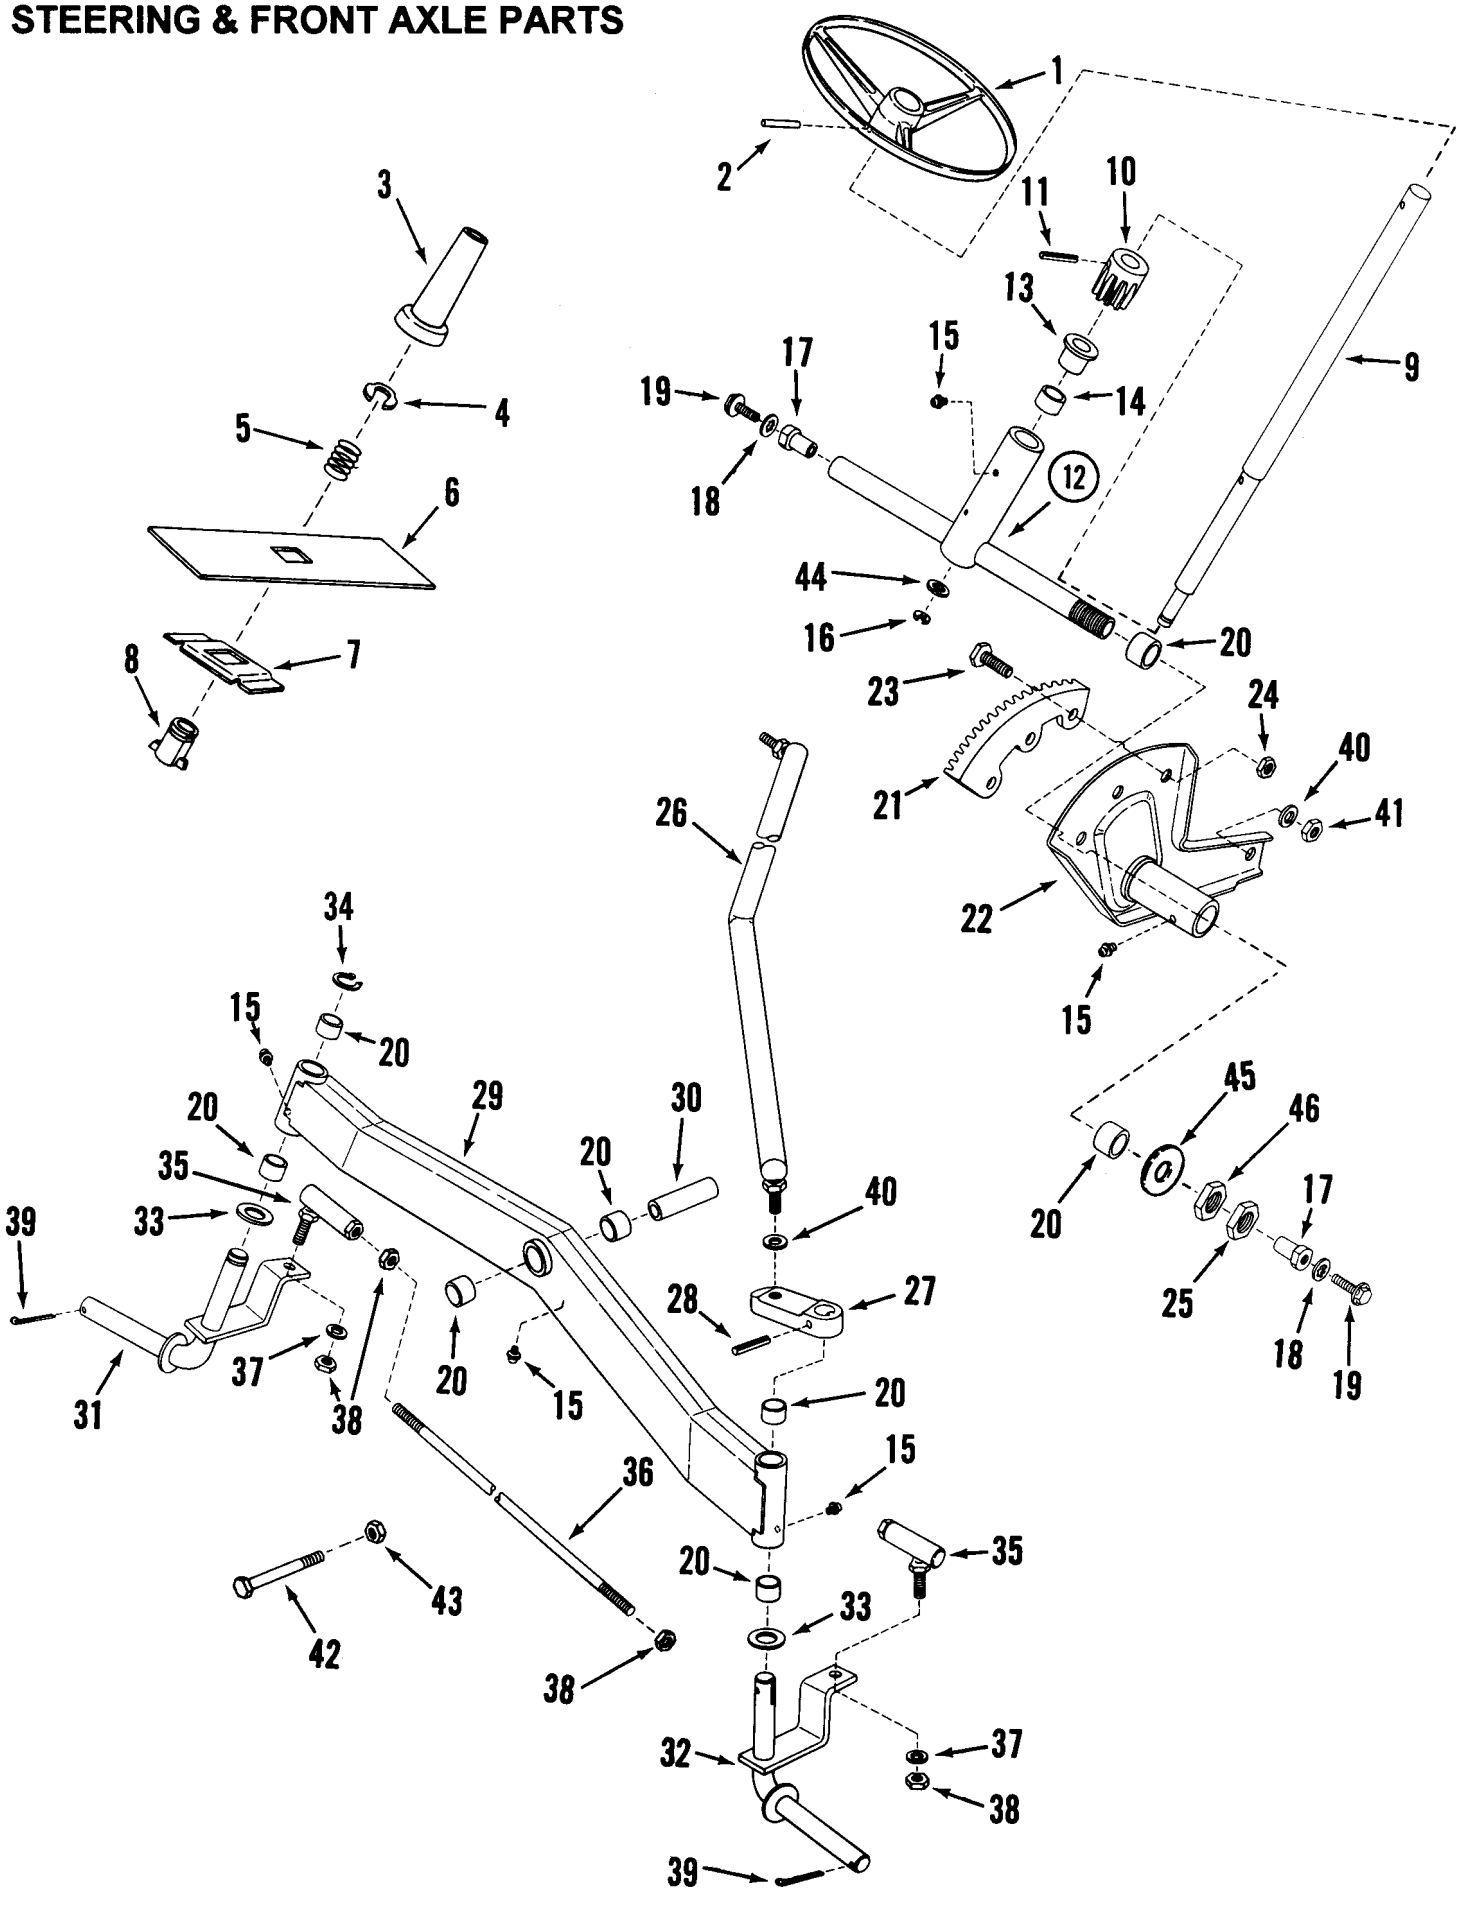

ITEM	PART NO.	DESCRIPTION
1	1-8589	STEERING WHEEL
2	1-4437	ROLL-PIN, 1/4" x 2-1/4"
3	1-8601	ACTUATOR, Steering Lock
4	1-4362	RING, 13/16" External Retaining
5	1-4402	SPRING, Actuator
6	1-4430	COVER, Slide
7	3-2272	RISER, Steering Lock
8	1-8353	BUSHING, Steering Lock
9	2-7646	SHAFT, Steering (Current Models)
10	1-8568	PINION, Steering
11	9-0841	ROLL-PIN, 3/16 x 1-1/2"
12	5-7363	ASSEMBLY, Bearing Support (Incl. Items 13 & 14)(Current Models)
13	1-4436	BEARING, Flange
14	1-4435	BUSHING
15	1-3864	FITTING, Lube (5)
16	9-0870	SNAP-RING, 5/16 (Current Models)
17	1-4358	PIVOT (2)
18	9-0391	WASHER, 5/16 Internal Tooth Lock (2)
19	9-0793	SCREW, 5/16-18 x 3/4" Hex Washer Self-Tap (2)
20	1-2706	BEARING (2)
21	1-9717	QUADRANT, Steering
22	5-1457	ASSEMBLY, Sector (Includes two item 20, one item 15)
23	9-0072	SCREW, 1/4-20 x 5/8" Hex Head Cap, Grade 5 (3)
24	9-0372	NUT, 1/4-20 Hex Center Lock, Grade B or 5 (3)
25	1-0027	NUT, 3/4-16 Hex Jam
26	1-9724	DRAG-LINK
27	1-8621	ARM, Steering
28	9-0842	ROLL-PIN, 1/4 x 1-1/4"
29	5-7366	ASSEMBLY, Front Axle (Includes six item 20, three item 15)
30	2-1882	JOURNAL, Axle
31	4-7812	KING-PIN, Right Side
32	4-7813	KING-PIN, Left Side
33	3-1036	WASHER, Thrust (2)
34	1-0746	RING, 3/4" External Retaining (2)
35	1-0745	BALL-JOINT (2)
36	1-4403	TIE-ROD
37	9-0118	WASHER, 3/8" Split Lock (2)
38	9-0155	NUT, 3/8-24 Hex, Grade 2 (2)
39	9-0364	COTTER-PIN, 5/32 x 1" (2)
40	9-0254	WASHER, 1/2 Split Lock (2)
41	9-0265	NUT, 1/2-20 Hex, Grade 2
42	9-0826	SCREW, 1/2-20 x 4" Hex Head Cap, Grade 5
43	9-0393	NUT, 1/2-20 Hex Thin Lock
44	1-3866	WASHER, 3/8" I.D. Flat
45	9-0863	WASHER, 3/4" I.D. Flat
46	9-0281	NUT, 3/4-16 Hex
47	6-0704	BAG, Hardware (Includes items 2 and 1-1024 Cap Plug)

TRANSMISSION ASSEMBLY PARTS

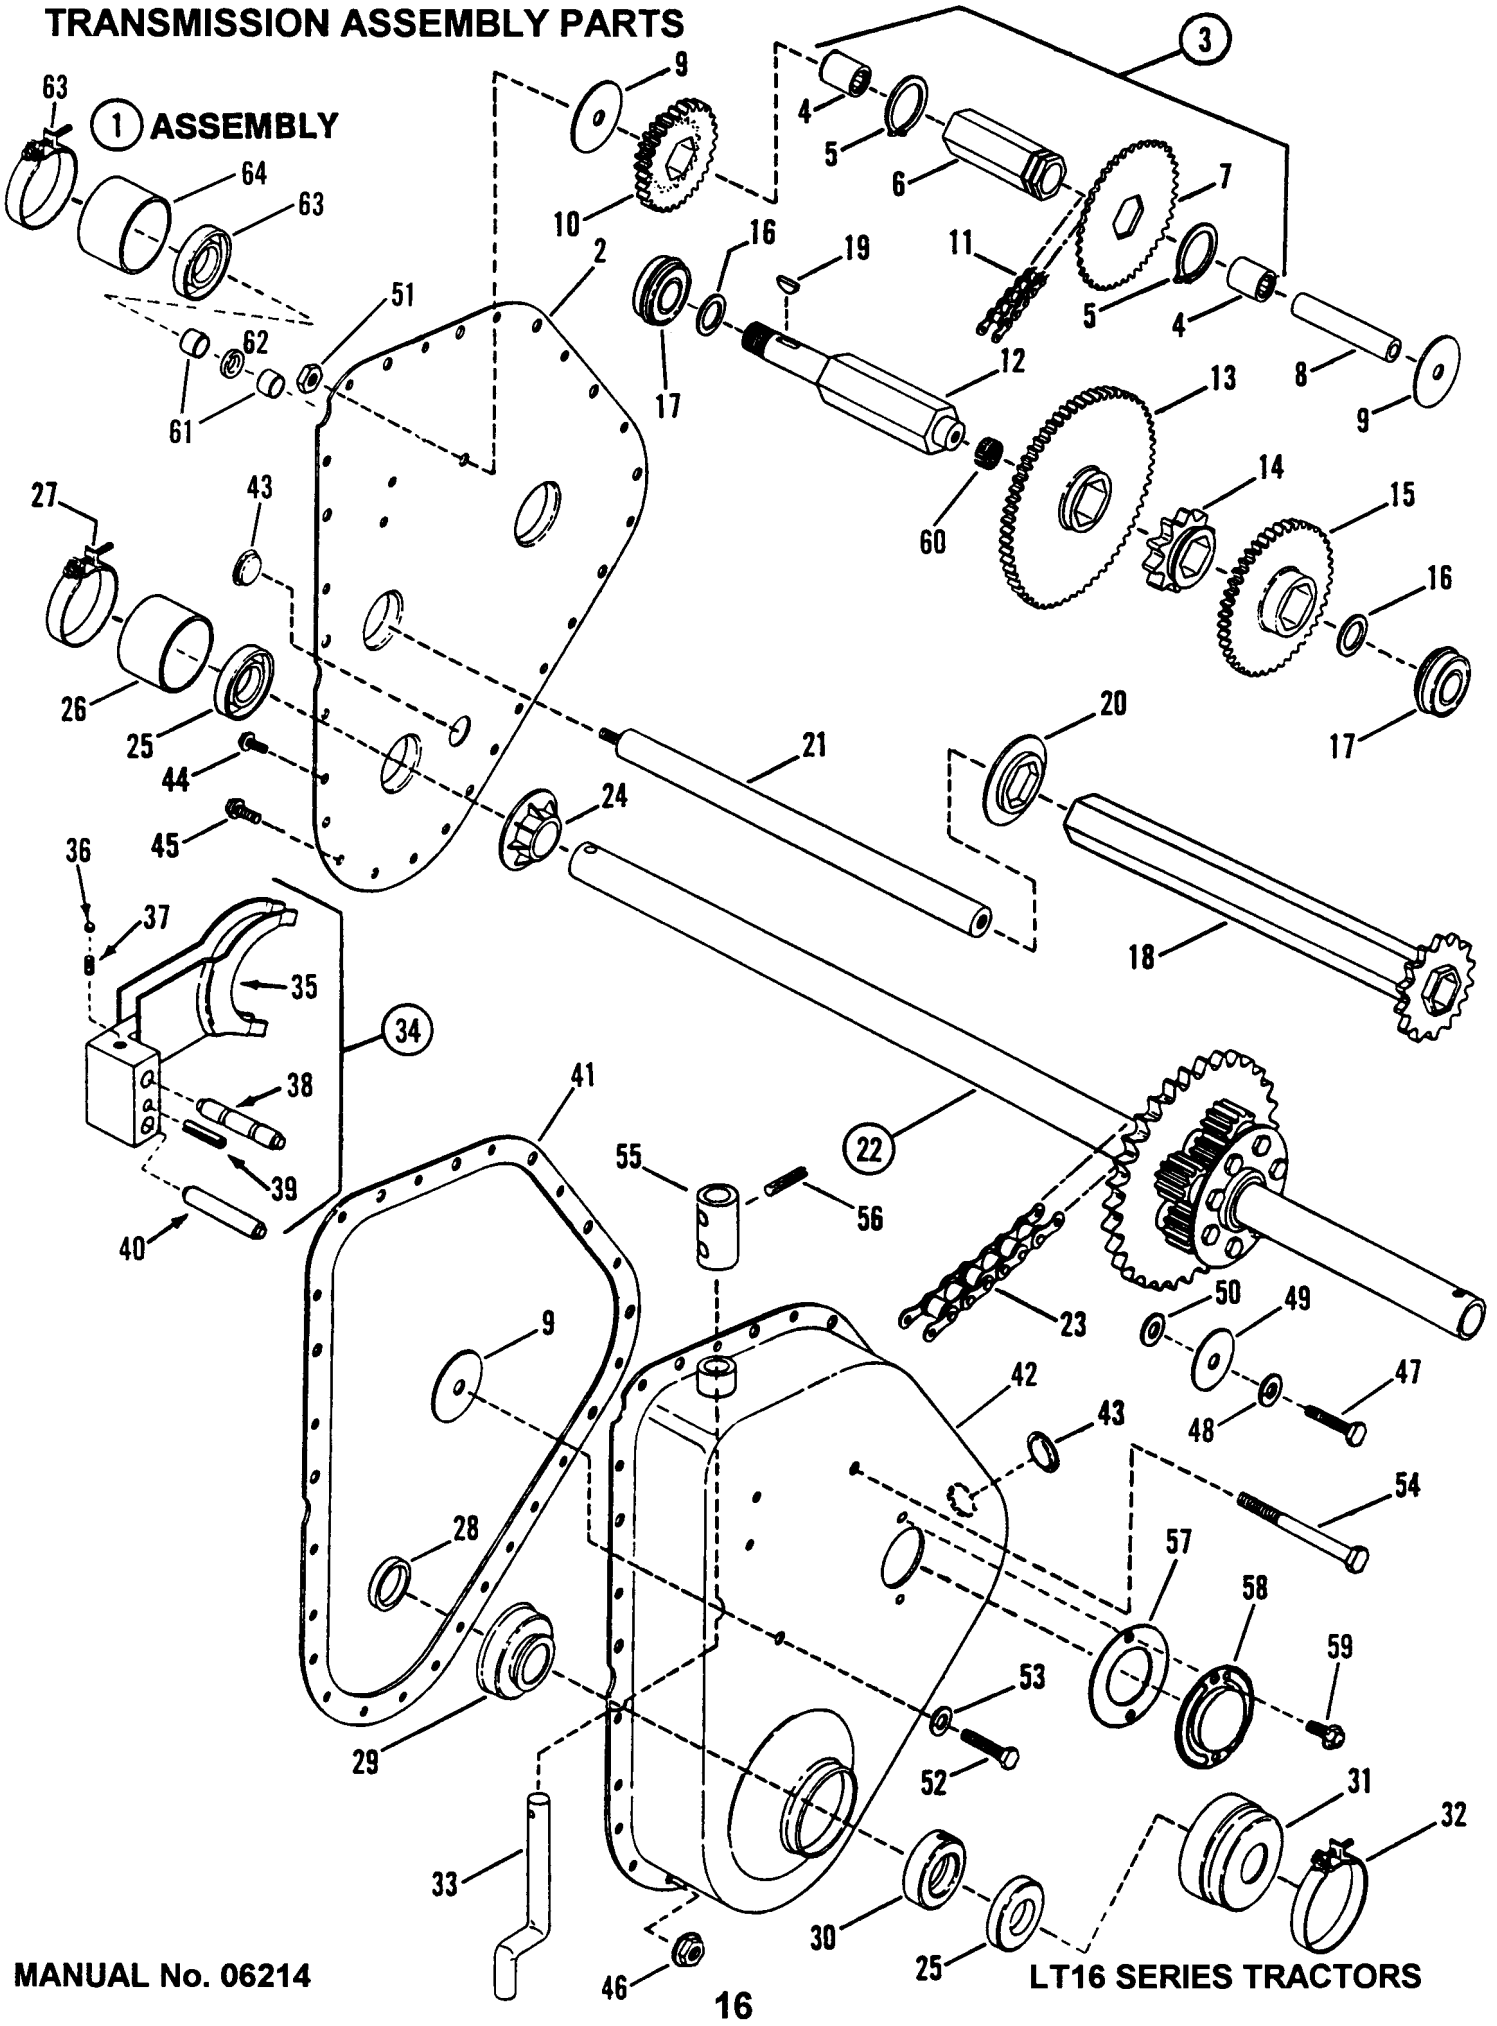

TRANSMISSION ASSEMBLY PARTS

ITEM	PART NO.	DESCRIPTION
1	5-9846	ASSEMBLY, TRANSMISSION (Includes items 2 thru 54)
2	5-7345	COVER, Transmission (Includes item 17)
3	5-1427	ASSEMBLY, Hex Tube (Short)(Includes items 4 thru 7)
4	1-1178	BEARING, Needle (2)
5	1-4470	RING, Retaining (2)
6	5-1455	TUBE, Hex (Includes two item $)
7	1-4448	SPROCKET, 46 Tooth (#35)
8	2-1898	RACE, Bearing
9	3-2255	THRUST WASHER
10	4-0499	CLUSTER GEAR
11	1-4490	CHAIN, 56 Pitch (#35)
12A	2-7633	SHAFT, Third Reduction **4.77" Long**
12B	2-7647	SHAFT, Third Reduction (1985) **6.027" Long**
13	1-8596	GEAR, 67 Tooth, 12 Pitch **Low Range**
14	1-8598	SPROCKET, 10 Tooth (#50)
15	1-8597	GEAR, 47 Tooth, 12 Pitch **High Range**
16	1-0690	SHIM WASHER (2)
17	1-0756	BEARING (2)
18	5-1584	ASSEMBLY, Drive Hex Tube
19	1-0211	KEY, Woodruff (#9)
20	1-0988	SPECIAL WASHER (Hex Insert)
21	2-1908	SHAFT, Drive Tube Support
22	*	DIFFERENTIAL (See Page 19 for Breakdown)
23	1-4444	CHAIN, 42 Pitch (#50)
24	1-4446	SPECIAL WASHER
25	1-1817	OIL SEAL (2)
26	3-1732	CAP, Seal
27	1-1037	CLAMP, 1-7/8" Hose
28	2-1899	SPACER, Bearing
29	1-4400	BEARING
30	1-4401	COLLAR, Lock
31	1-4541	CAP, Dust Seal
32	1-4542	CLAMP, For 2.69" Hose
33	3-2309	ROD, (HI-LO Range) Shift
34	5-7330	ASSEMBLY, HI-LO Shifter (Includes Items 35 thru 39)
35	4-7833	FORK, Shift
36	1-4469	BALL, Detent
37	1-4500	SPRING, Detent Ball
38	2-1900	GUIDE-PIN, Detent
39	9-0842	ROLL-PIN, 1/4 x 1-1/4"
40	2-1901	GUIDE-PIN, Shift
41	1-9962	GASKET, Cover to Case
42	5-7329	ASSEMBLY, Transmission Case (Includes item 17 & 29)
43	1-1024	PLUG, Oil Fill & Check (2)
44	9-0362	SCREW, 1/4-20 x 5/8" HWF Self Tap (18)
45	9-0584	BOLT, 1/4-20 x 1/2" HWF (2-Locating)
46	9-0583	NUT, 1/4-20 Hex Flange Lock (for item 45)
47**	9-0233	SCREW, 5/16-24 X 3/4" Hex Head Cap
48**	9-0187	WASHER, 5/16 Split Lock
49**	1-3848	WASHER, 5/16 Flat-Special
50**	9-0188	WASHER, 5/16 SAE
51	9-0499	NUT, 3/8-16 Hex Top Lock
52	9-0134	SCREW, 3/8-16 x 3/4" Hex Head Cap, Grade 5
53	9-0118	WASHER, 3/8 Split Lock
54	9-0810	SCREW, 3/8-16 x 3-1/4" Hex Head Cap
55	2-1903	COUPLING, Shift Lever
56	9-0844	ROLL-PIN, 3/16 X 3/4"
57	1-5016	GASKET
58	3-2434	COVER, Bearing
59	9-0302	SCREW, 1/4-20 x 3/8" Hex Washer Self-Tap
60	1-5017	RING, 5/8 Tolerance
61	1-5041	SPACER, Brake Shaft (2)
62	1-4508	"O"-Ring
63	1-5039	SEAL, Oil
64	1-5040	BOOT, Oil Seal
65	1-5038	CLAMP

*Not available assembled as shown
**Older units not updated

PRIMARY CHAIN CASE

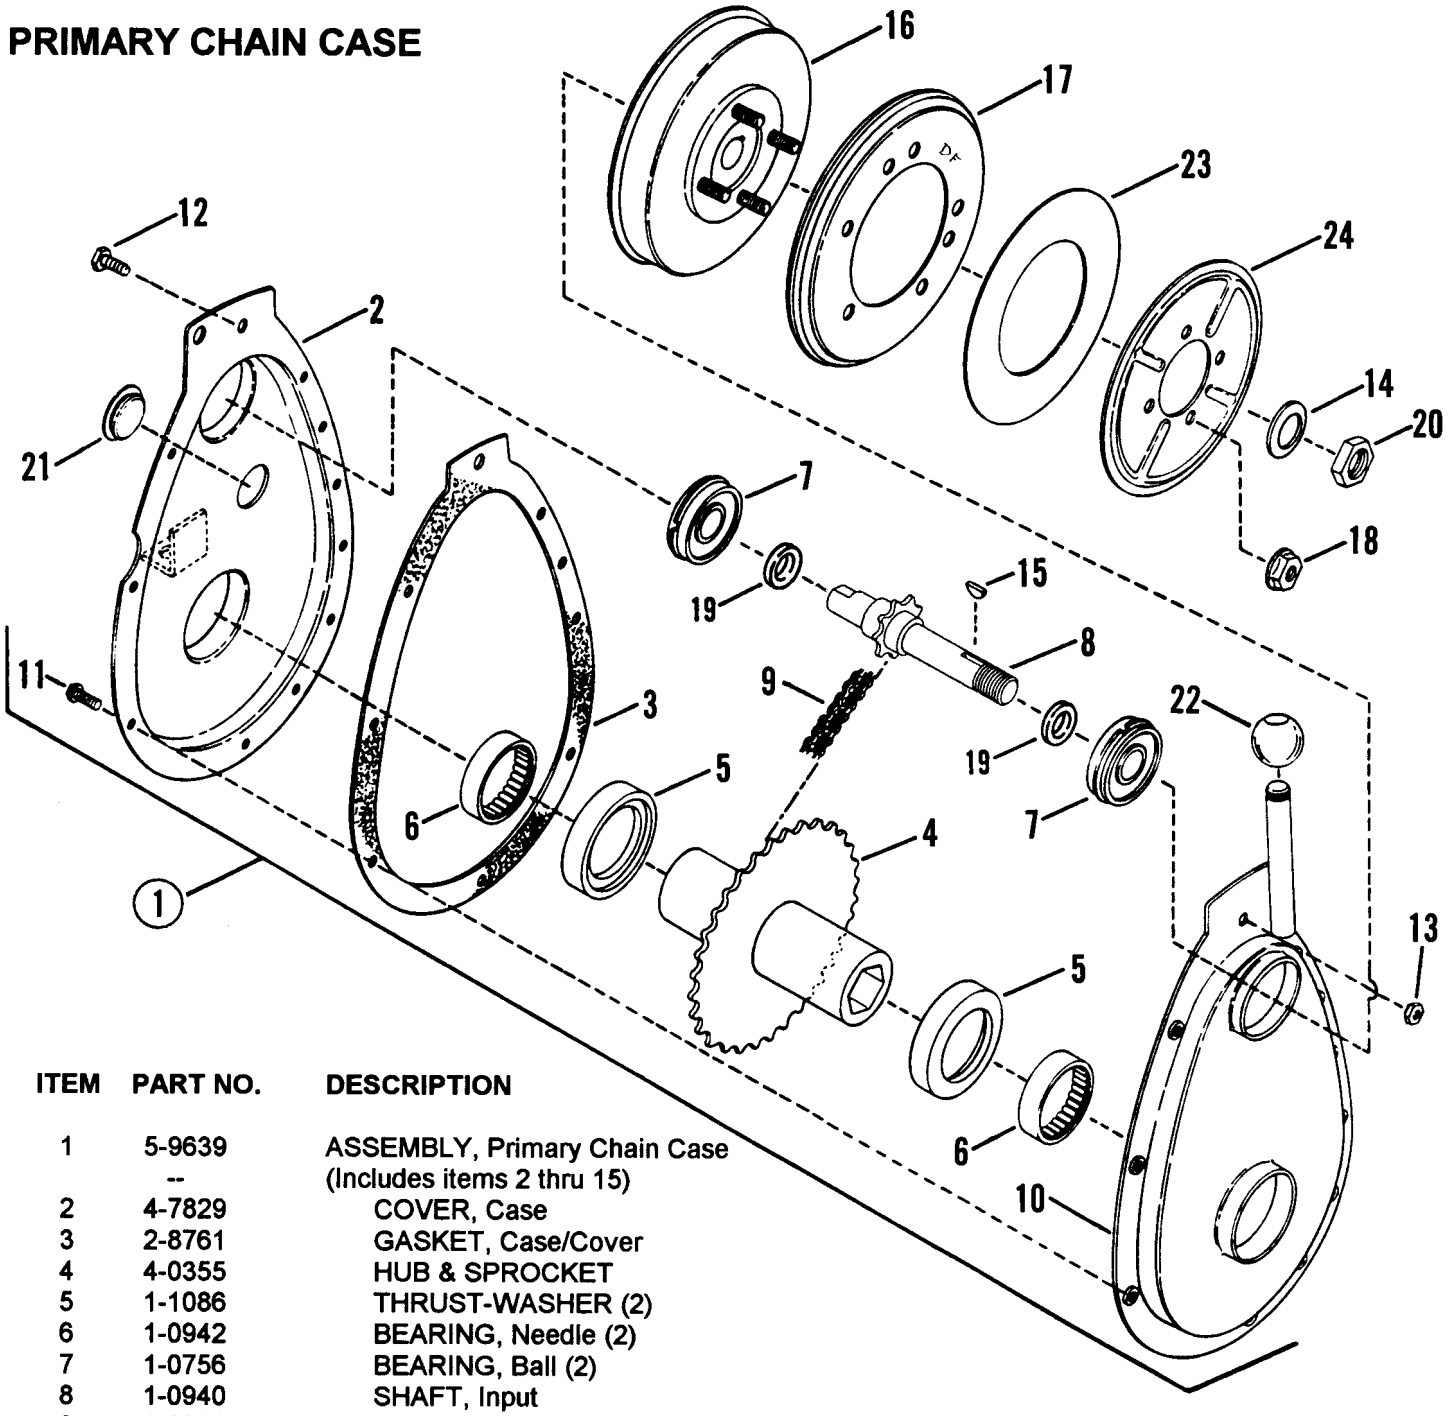

ITEM	PART NO.	DESCRIPTION
1	5-9639	ASSEMBLY, Primary Chain Case
	--	(Includes items 2 thru 15)
2	4-7829	COVER, Case
3	2-8761	GASKET, Case/Cover
4	4-0355	HUB & SPROCKET
5	1-1086	THRUST-WASHER (2)
6	1-0942	BEARING, Needle (2)
7	1-0756	BEARING, Ball (2)
8	1-0940	SHAFT, Input
9	1-0941	CHAIN
10	4-7830	CASE, Sprocket
11	9-0307	SCREW, #10-24 x 1/2" HW Self-Tap (10)
12	9-0072	SCREW, 1/4-20 x 5/8" Hex Head Cap, Gr. 5
13	9-0372	NUT, 1/4-20 Hex Center Lock
14	1-1121	WASHER, Bellville
15	1-0614	KEY, 1/8 x 5/8 Woodruff
16	2-0911	HUB, Driven Disc
17	1-0765	DISC, Driven
18	9-0356	NUT, 5/8-18 Hex Center Lock
19	1-4508	O-RING, 5/8 (2)
20	9-0585	NUT, 5/8-18 Hex Flange Lock, Grade 5 (3)
21	1-1024	PLUG (Oil fill & check)
22	1-4396	BUSHING, Primary Clutch Ball
23	1-4523	WASHER, Thrust
24	3-2331	PLATE

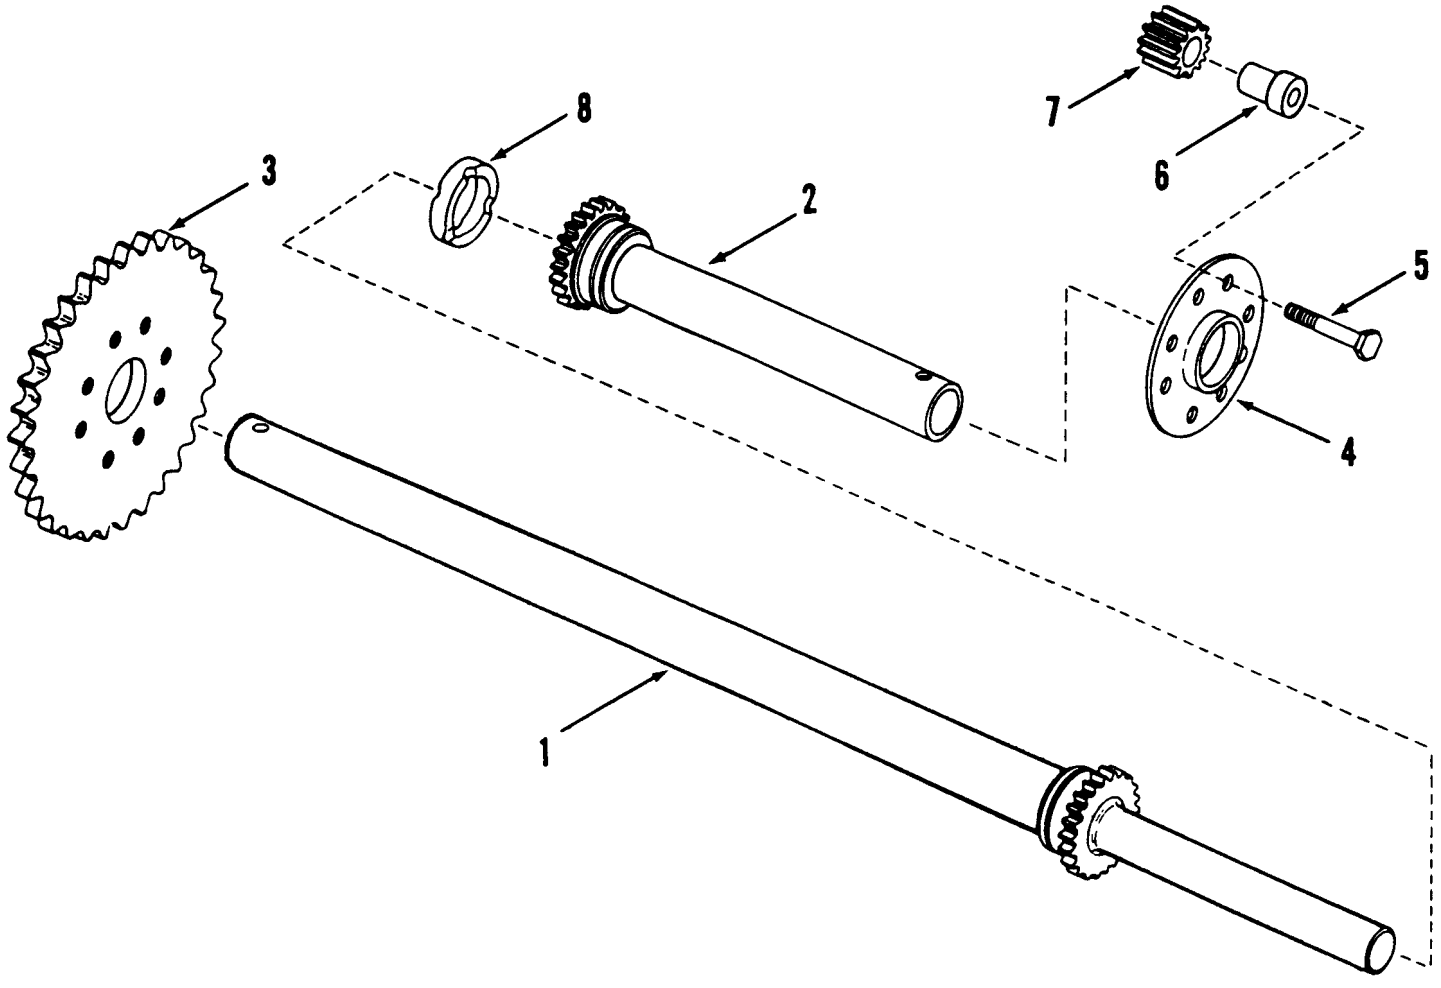

ITEM	PART NO.	DESCRIPTION
1	5-7323	AXLE, Long (Includes Gear)
2	5-7380	AXLE, Short (Includes Gear)
3	1-8599	SPROCKET, 31 Tooth
4	3-8067	PLATE, Differential
5	1-2333	SCREW, 5/16-24 x 1-5/8" Hex Head Cap (Special) Lock, Grade 5 (8)
6	2-1126	SPACER, Pinion (8)
7	2-1127	PINION GEAR, Differential (8)
8	1-1026	SPACER, Axle

DIFFERENTIAL PART OF TRANSMISSION ASSEMBLY- SEE PAGE 16.

ELECTRIC SYSTEM COMPONENTS

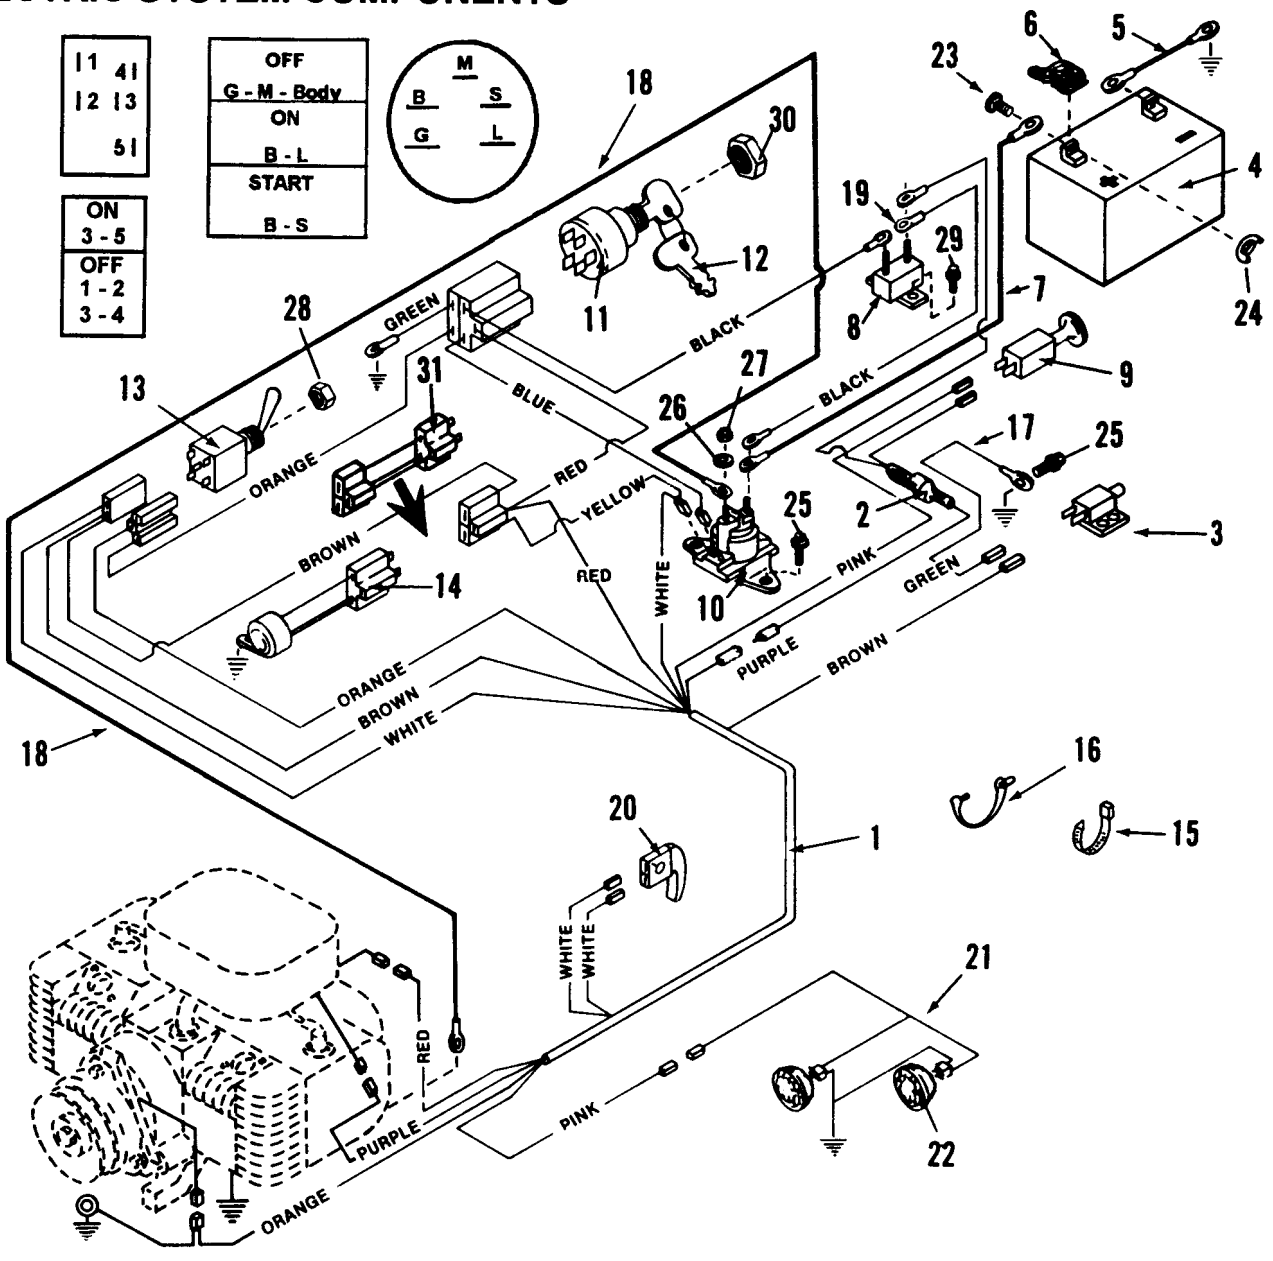

ITEM	PART NO.	DESCRIPTION
1	1-9771	HARNESS, Wiring
2	2-3235	HARNESS, Diode
3	1-4847	SWITCH, Seat Interlock (NO)
4	6-0705	BATTERY 12V. 30 Amp Hour
5	1-4475	CABLE, Negative (Black)
6	1-2444	COVER, Positive Terminal
7	1-4476	CABLE, Solenoid/Starter(11")
8	1-3941	CIRCUIT-BREAKER
9	1-8623	SWITCH, Headlamp
10	1-8604	SOLENOID
11	1-8562	KEYSWITCH (Incl. item 12)
12	1-1138	KEY (Set of 2)
13	1-9545	SWITCH, PTO
14	1-8571	MODULE, Interlock
15	1-4451	TIE, Wire
16	1-2080	TIE, Cable

ITEM	PART NO.	DESCRIPTION
17	1-5155	WIRE, Seat Switch to Ground
18	1-4477	CABLE, Solenoid/Starter (36")
19	1-4478	WIRE, Breaker to Solenoid
20	1-8524	SWITCH, Clutch Interlock
21	1-9529	HARNESS, Headlamp
22	1-8415	HEAD-LAMP (2)
23	9-0074	BOLT, 1/4-20 X 3/4" Carriage
24	9-0311	WING-NUT, 1/4-20 (2)
25	9-0362	SCREW, 1/4-20 X 5/8" Hex Washer Self-Tap (2)
26	9-0053	WASHER, 1/4 Int. Tooth Lock
27	9-0063	NUT, 1/4-20 Hex (2)
28	1-2686	NUT, Special 1/2-27 Hex
29	9-0307	SCREW, #10-24 x 1/2" Hex Washer Face Self-Tap (2)
30	1-2685	NUT, Special 5/8-32 Hex
31	1-5208	HARNESS, Module Repair

ITEM	PART NO.	DESCRIPTION
1	5-1372	ASSEMBLY, Front Tire & Rim (Includes items 2, 3, & 4)
2	1-9718*	RIM, LT16 Front Wheel
3	1-4350	TIRE, 15 x 6.00 x 6
4	1-2234	VALVE, Air
5	1-3876	FITTING, Lube
6	1-4483	BEARING, Wheel (2)
7	3-2027	WASHER, 49/64 x 1-1/2" Flat
8	1-1022	COVER, Dust
9	9-0364	PIN, 5/32 X 1" Cotter

*(Rim Includes one item 5 & two item 6)

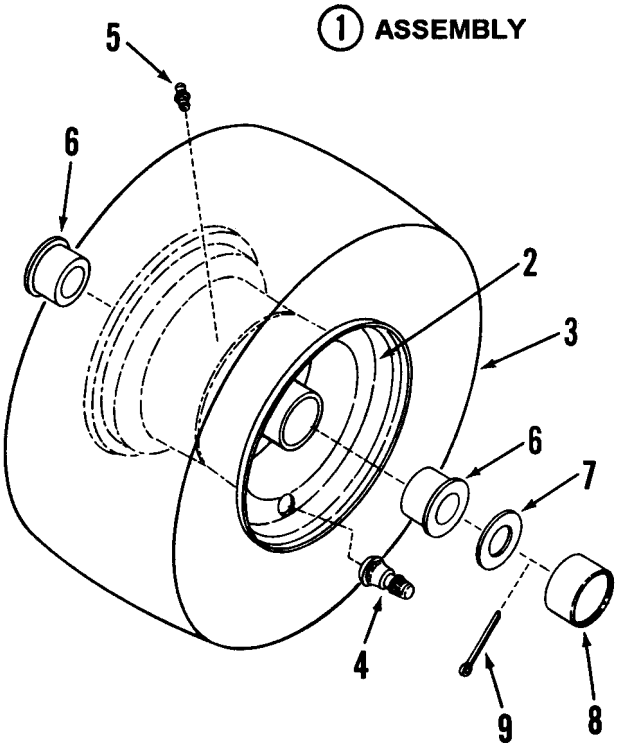

REAR WHEELS

ITEM	PART NO.	DESCRIPTION
1A	5-1367	ASSEMBLY, Rear Tire & Rim (Includes items 2, 3A, & 4)
1B	5-1524	ASSEMBLY, Rear Tire & Rim (Includes items 2, 3B & 4)
2	1-2163	RIM, LT16 Rear Wheel
3A	1-4349	TIRE, 18 x 6.50 x 8
3B	1-5047	TIRE, 21 x 7.00 x 8
4	1-2234	VALVE, Air
5	4-0433	HUB, Rear Wheel
6	1-1013	BOLT, Tapered
7	1-1201	NUT, 5/16-24 Lock
8	9-0367	BOLT, Lug (1/2-20 x 3/4" HHCS)
9	1-5266	HUB-CAP
10	6-0609	KIT, Tire Chain (18 x 6.5 x 8)
--	6-0700	KIT, Tire Chain (21 x 7.00 x 8)

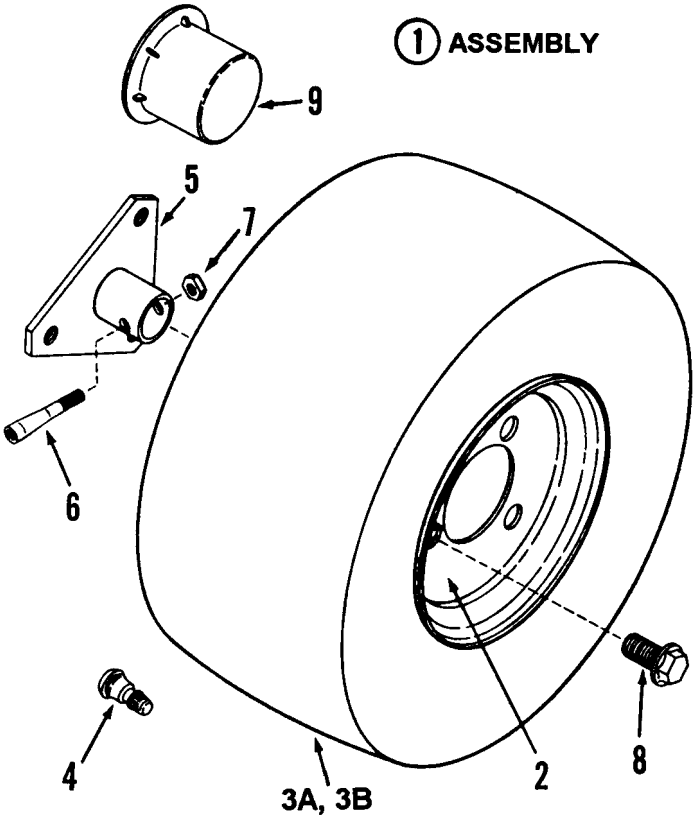

IMPLEMENT LIFT PARTS

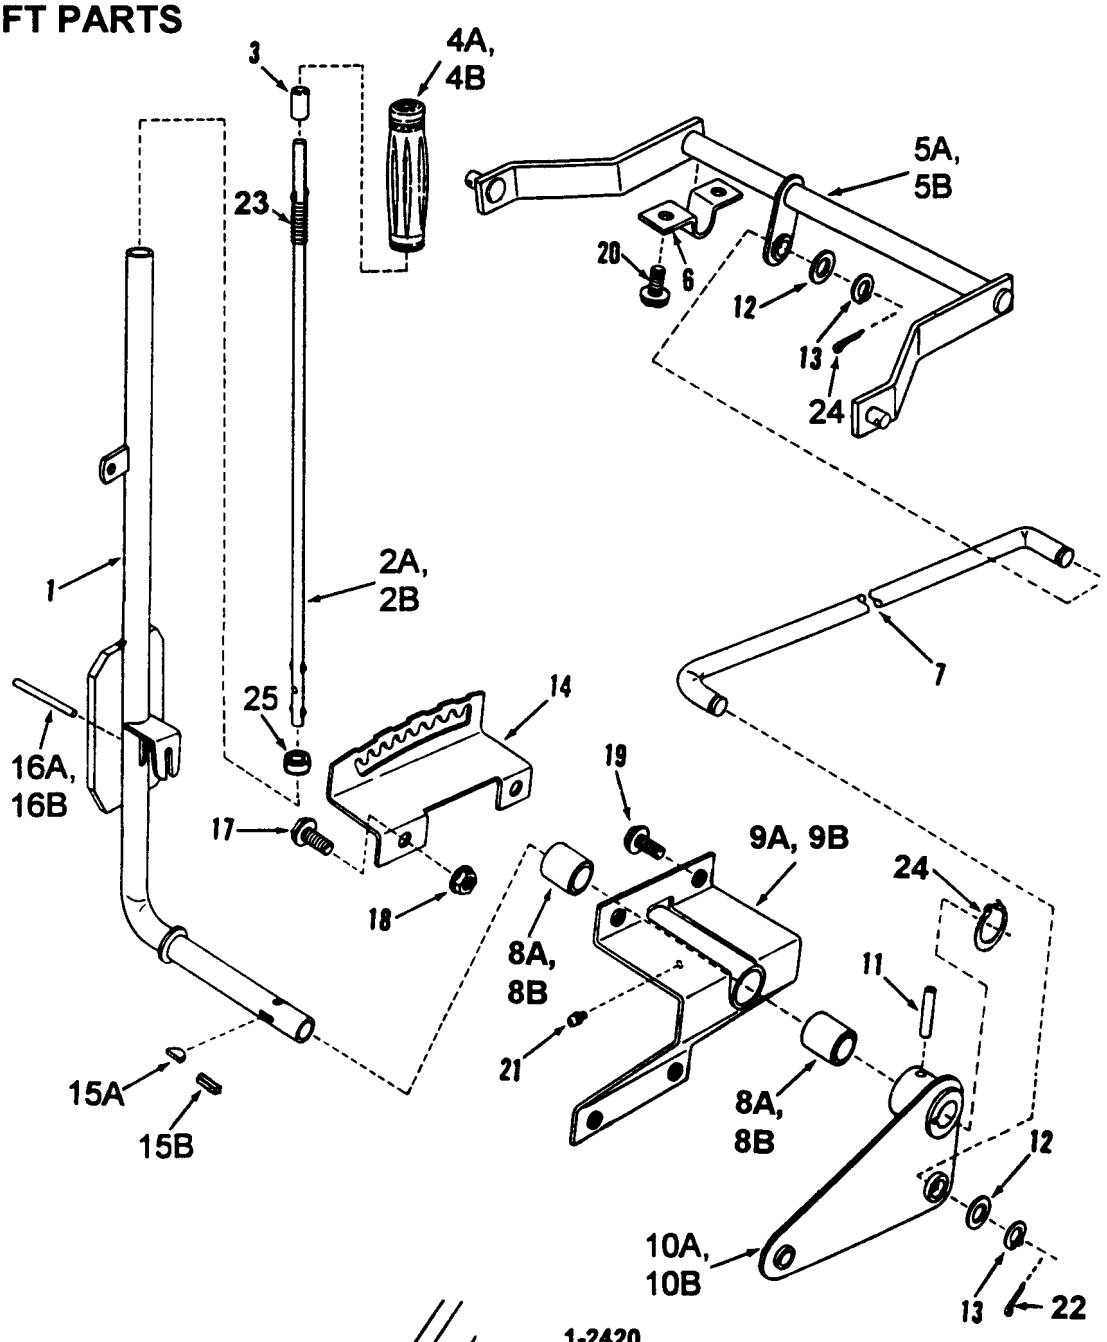

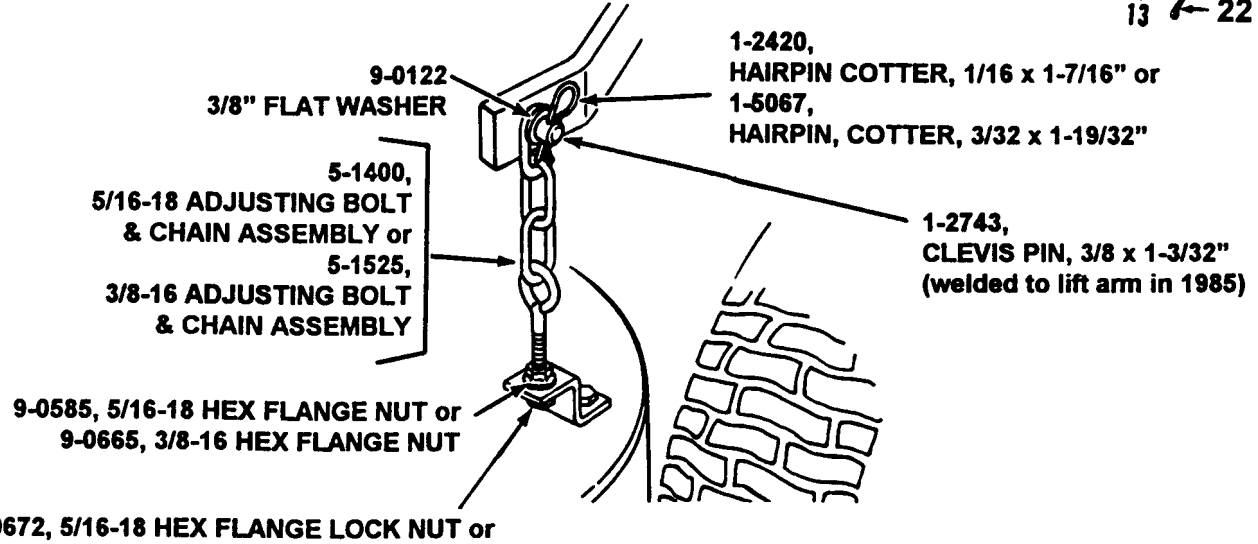

REAR LIFT ARM

ITEM	PART NO.	DESCRIPTION
1*	4-7868	ARM, Implement Lift Lever
2A	5-7324	ASSEMBLY, Plunger
2B*	3-2435	ROD, Lift Lever (1985)
3**	1-4361	CAP, Lift Release
4A	1-9541	GRIP, Handle
4B**	1-3948	GRIP, Handle
5A	4-9703	ARM, Rear Lift (16-3/4" Wide)
5B	4-9725	ARM, Rear Lift (1985)(22" Wide)
6	3-2239	BRACKET, Hanger (2)
7	3-2266	LIFT-ROD
8A	1-4628	BEARING, Sleeve (2)
8B	1-8289	BEARING, Sleeve (2)
9A	5-1417	PIVOT ASSY, Lift Lever
9B	5-1523	PIVOT ASSY, Lift Lever
10A	4-7806	LEVER-ARM
10B	4-7874	LEVER-ARM
11	9-0845	ROLL-PIN, 5/16 x 1-1/2
12	9-0250	WASHER, 1/2 SAE (2)
13	1-4341	RING, Retaining (2) (Early Production)
14	3-8063	QUADRANT, Lift Lever
15A	1-3857	KEY, 1/4 x 7/8" Woodruff
15B**	1-3250	KEY, 1/4 x 1/4 Square
16A	9-0843	PIN, 3/16 x 1-3/4"
16B**	9-0881	PIN, 3/16 x 2" Groove
17	9-0612	BOLT, 3/8-16 x 3/4" Hex Flange Lock (2)
18	9-0613	NUT, 3/8-16 Hex Flange Lock
19	9-0361	SCREW, 5/16-18 x 5/8" Hex Washer Face Self-Tap (4)
20	9-0506	SCREW, 3/8-16 x 1/2" Hex Washer Face Self-Tap (4)
21	1-3864	FITTING, Lube
22	9-0041	PIN, 1/8 x 1" Cotter (Late Production)
23**	1-4432	SPRING
24**	1-5020	RING, 7/8 Ext. Retaining
25*	1-5019	PLUG
26	6-0720	KIT, Lift Handle Replacement (Includes * marked items)
27**	6-0721	BAG, Hardware (6-0720) (Includes ** marked items)

6-0701, Lift Arm Kit (converts LT16002 to accept pre-1985 decks) is made up of the following:

ITEM	PART NO.	DESCRIPTION
1	4-9703	ARM, Rear Lift (16-3/8")
2	5-1525	ASSY, Bolt & Chain (2)
3	9-0672	NUT, 5/16-18 Hex Lock (2)
4	9-0612	BOLT, 3/8-16 x 3/4" Hex Flange Lock (2)

6-0702, Lift Arm Kit (converts LT16001 to accept 1985 decks) is made up of the following:

ITEM	PART NO.	DESCRIPTION
1	4-9725	ARM, Rear Lift (1985)(22")
2	1-3847	RETAINER, 3/8" Bolt (2)
3	9-0850	BOLT, 3/8-16 x 3/4" Carriage (2)
4	9-0613	NUT, 3/8-16 Hex Flange Lock (2)

6-0712, Hardware Bag is made up of the following:

ITEM	PART NO.	DESCRIPTION
1	9-0850	BOLT, 3/8-16 x 3/4" Square Square Neck Carriage, Gr. 2 (2)
2	9-0613	NUT, 3/8-16 Hex Flange Lock (2)
3	1-3847	RETAINER, 3/8" Bolt (2)
4	9-0612	BOLT, 3/8-16 x 3/4" Hex Flange Lock (2)
5	1-5067	HAIRPIN, 3/32 x 1-19/32" (2)
6	1-0736	PIN, 3/8 x 1-1/16" Clevis
7	9-0122	WASHER, 3/8 Flat (2)
8	1-2951	PIN, 1/2 x 1-3/8" Clevis (2)
9	1-3844	HAIRPIN, 5/8" Shaft (2)
10	1-0935	WASHER, 3/4" Flat (6)
11	3-2276	CLEVIS, Lift Cable

DECK HANGER DETAIL

HARDWARE BAG 6-0591 (33 & 41" DECK)

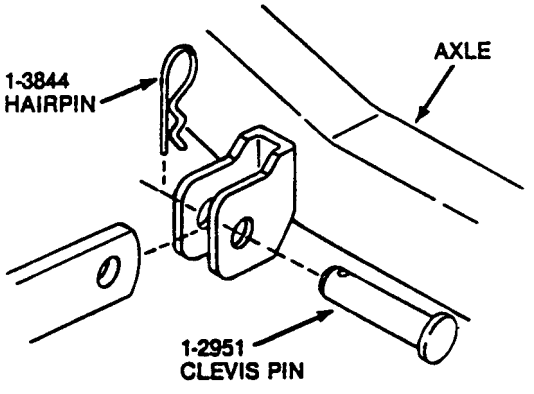

FRONT LIFT ARM

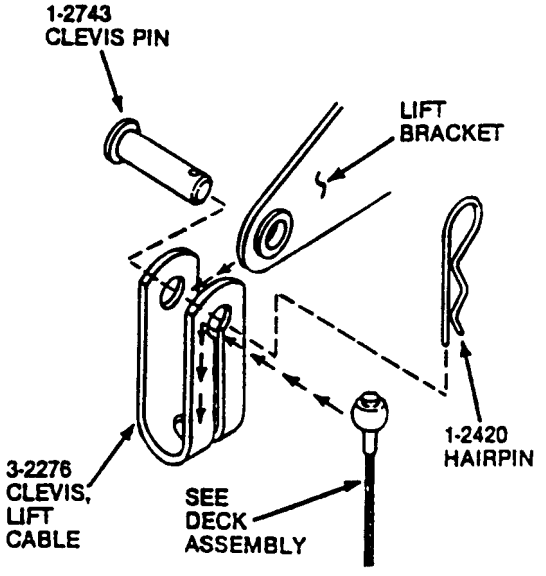

FRONT LIFT BRACKET

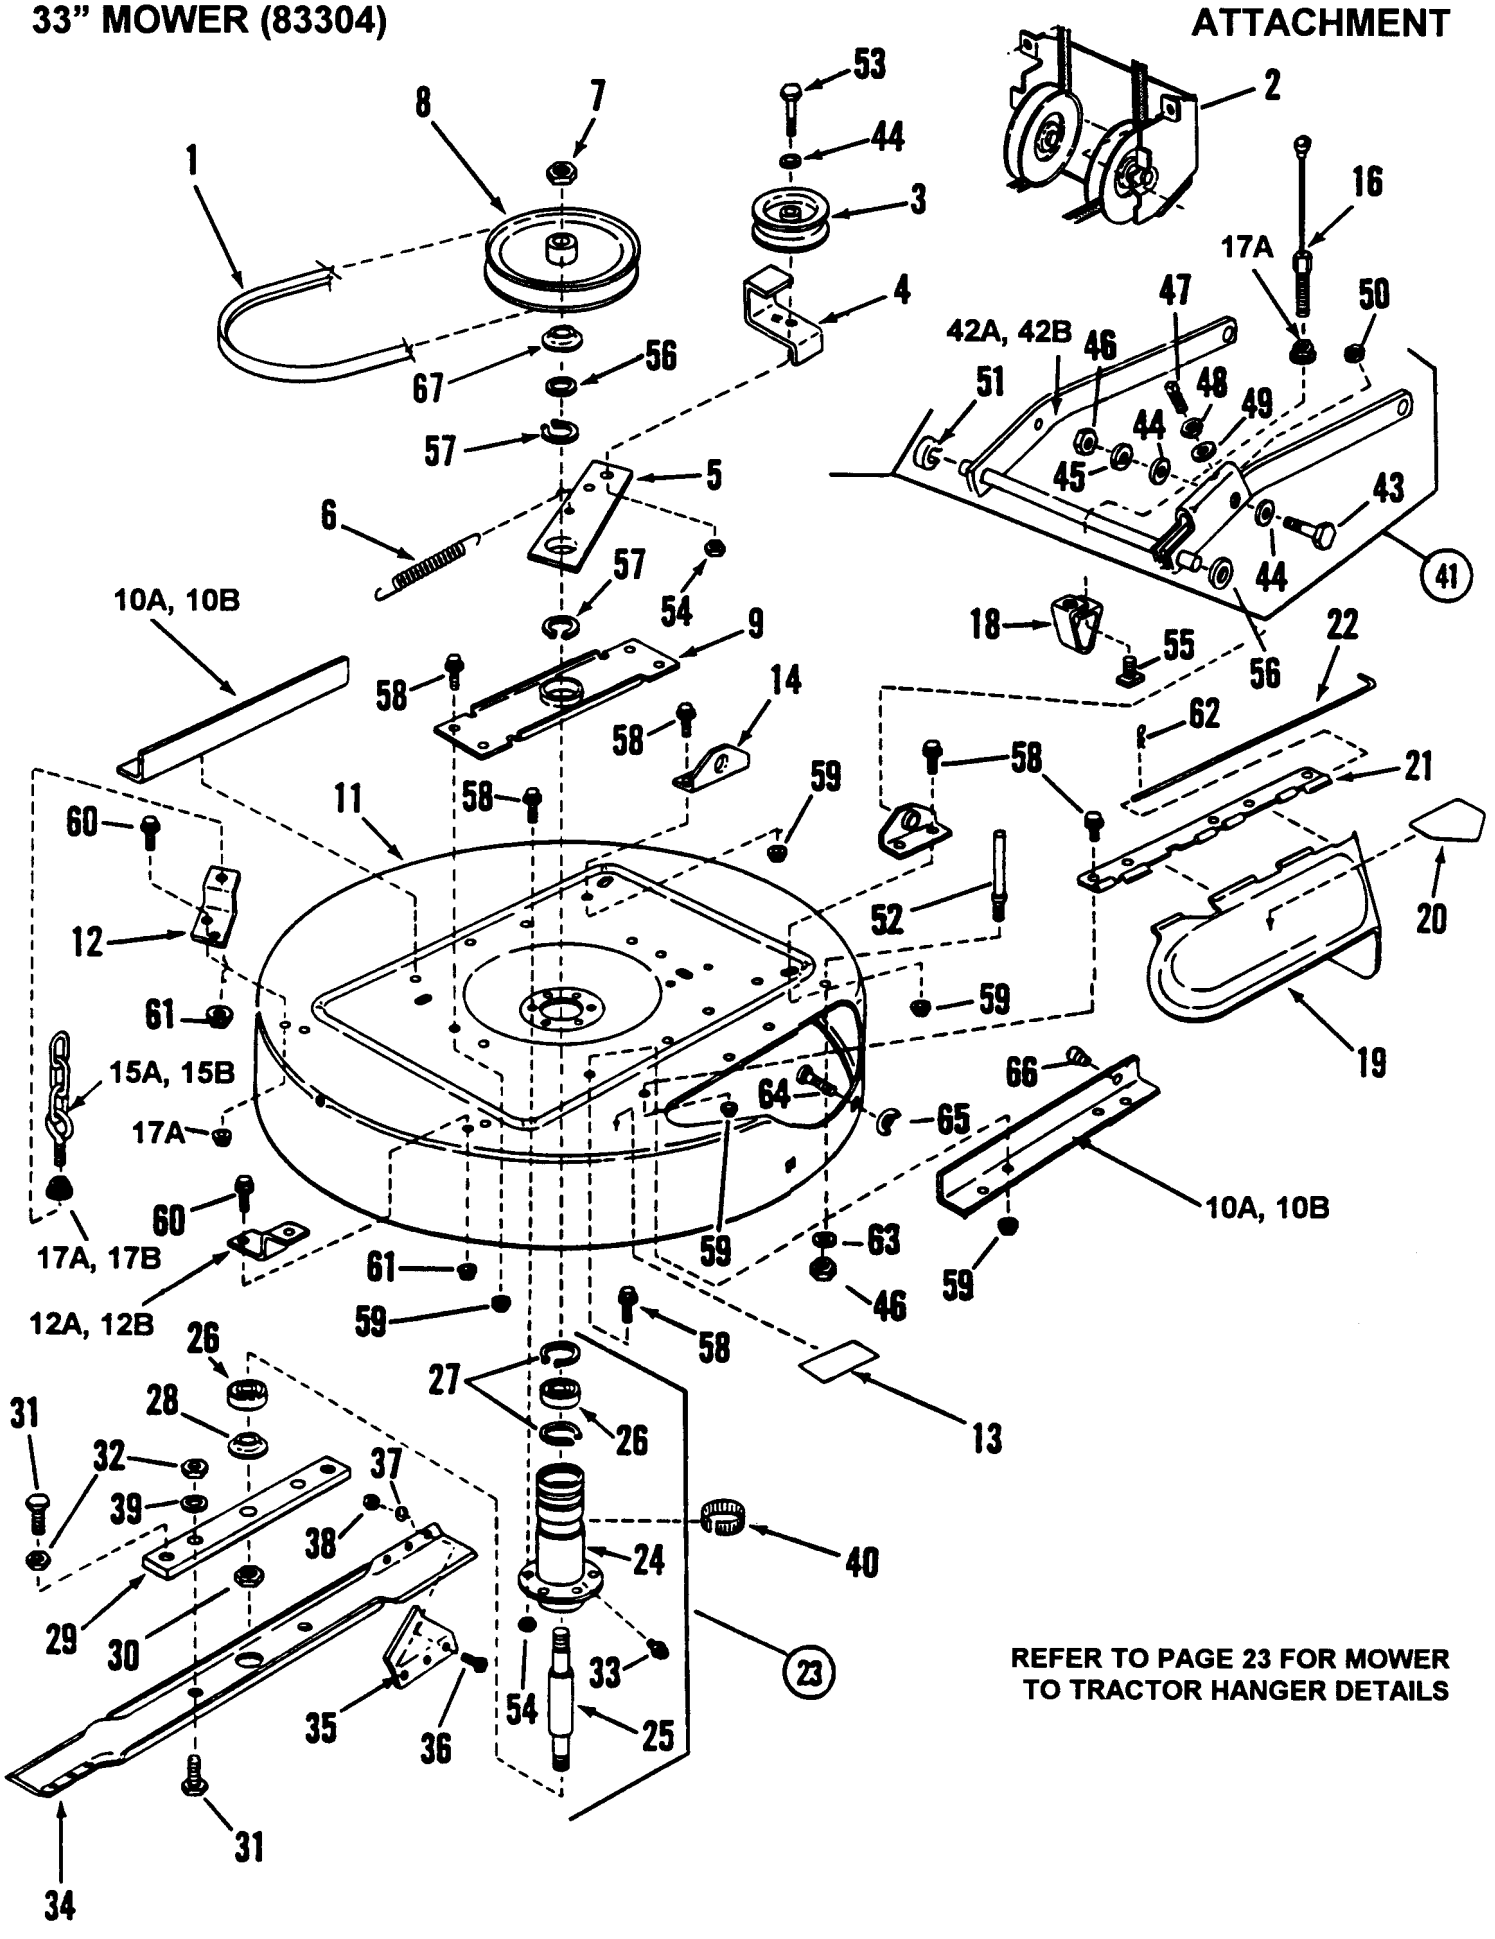

REFER TO PAGE 23 FOR MOWER TO TRACTOR HANGER DETAILS

ITEM	PART NO.	DESCRIPTION
1	1-4799	BELT, 33" Mower Drive (A101)
2	5-7362	ASSEMBLY, Mule Drive (See Page 30 for parts breakdown)
3	1-8574	PULLEY, Idler (Flat)(4.12O.D.)
4	3-2341	GUIDE, Belt
5	4-7841	ARM, Idler
6	1-4405	SPRING, Belt Tension
7	1-0027	NUT, 3/4-16 Hex Jam
8	1-8581	PULLEY, 8" O.D.
9	3-8018	BRACE, Spindle
10A	3-8103	RAIL, Side (2)
10B	3-8194	RAIL, Kit Side '85 (2)
11	3-5068	DECK, 33" Cutter
12A	3-2240	BRACKET, Rear Lift (2)
12B	5-1533	BRACKET, Rear Lift (1985)(2)
13	1-2421	DECAL, Caution, (Deflector/Adapter)
14	3-2297	BRACKET, Front Hanger (2)
15A*	5-1400	ASS'Y, 5/16 Bolt-Chain (2)
15B	5-1525	ASSEMBLY, 3/8 Bolt-Chain (2)
16	1-4355	CABLE, Front Lift
17A*	9-0585	NUT, 5/16-18 Hex Fl. Lock (7)
17B	9-0665	NUT, 3/8-16 Hex Jam (7)
18	3-8043	BRACKET, Front Lift Hanger
19	5-1456	DEFLECTOR (Incl. item 20)
20	1-3010	DECAL, Danger (Cut Finger)
21	3-9586	HINGE, Side Chute
22	3-2323	PIN, Hinge
23	5-9619	ASSEMBLY, Spindle (Includes items 24 thru 33)
24	5-1529	HOUSING, Spindle (Includes #33)
25	2-7631	SPINDLE, 33" Mower Deck
26	1-3313	BEARING, Spindle (2)
27	1-2491	RING, Retaining
28	1-4407	WASHER, Spindle
29	3-7751	HOLDER, Blade
30	9-0356	NUT, 5/8-18 Hex Ctr. Lock
31	9-0392	SCREW, 1/2-20 x 1" Hex Head Cap, Grade 5 (4)
32	9-0559	NUT, 1/2-20 Hex Jam (4)
33	1-0817	FITTING, Lube (2)

ITEM	PART NO.	DESCRIPTION
34	1-9523	BLADE, 33" Cutter Deck
35	6-0480	KIT, Air Lift (Incl. two 3-7723 & six each items 36, 37, 38)
36	9-0228	SCREW, 5/16-24 Machine (6)
37	9-0391	WASHER, 5/16 Internal Tooth Lock (6)
38	9-0223	NUT, 5/16-24 Hex (6)
39	9-0509	WASHER, 1/2" Internal Tooth Lock (2)
40	1-2670	RING, Tolerance
41	5-7335	ASSEMBLY, Front Lift Arm (Includes items 42 thru 51)
42A	4-9702	ARM, Front Lift
42B	4-7870	ARM, Front Lift (1985)
43	9-0824	SCREW, 3/8-24 x 1-1/4" Hex Head Cap, Grade.5
44	9-0122	WASHER, 3/8 Flat (3)
45	9-0118	WASHER, 3/8 Split Lock
46	9-0155	NUT, 3/8-24 Hex, Gr. 2 (2)
47	9-0210	SETSCREW, 5/16-18x 1-1/4
48	9-0197	NUT, 5/16-18 Hex Jam
49	9-0188	WASHER, 5/16 Flat
50	9-0196	NUT, 5/16-18 Hex
51	1-0996	RING, White
52	1-4583	STUD, Deck Stop
53	9-0164	SCREW, 3/8-24 x 1-1/2" Hex Head Cap, Grade 2
54	9-0289	NUT, 3/8-24 Hex Center Lock
55	9-0388	T-NUT, 5/16-18
56*	1-0935	WASHER, Spacer
57	1-0740	RING, Retaining (2)
58*	9-0612	BOLT, 3/8-16 x 3/4" Hex Flange Lock Lock (18)
59*	9-0613	NUT, 3/8-16 Hex Flange Lock (18)
60	9-0721	BOLT, 5/16-18 x 1/2" Hex Flange Lock Lock, Grade 5 (4)
61*	9-0672	NUT, 5/16-18 Hex Flange Top Lock (2)
62	1-2420	HAIRPIN, Cotter
63	9-0390	WASHER, 3/8 Int. Tooth Lock
64	9-0001	BOLT, 5/16-18 x 3/4" Short Neck Carriage, Grade 5
65	9-0492	WING-NUT, 5/16-18
66	1-4756	BUMPER BUTTON
67	1-4407	WASHER, Spindle
68	6-0690	BAG, Hardware for 83399 (Includes * marked items)
69	6-0603	BAG, Hardware (Includes 1-4583, STUD and one each item 46 and item 63)

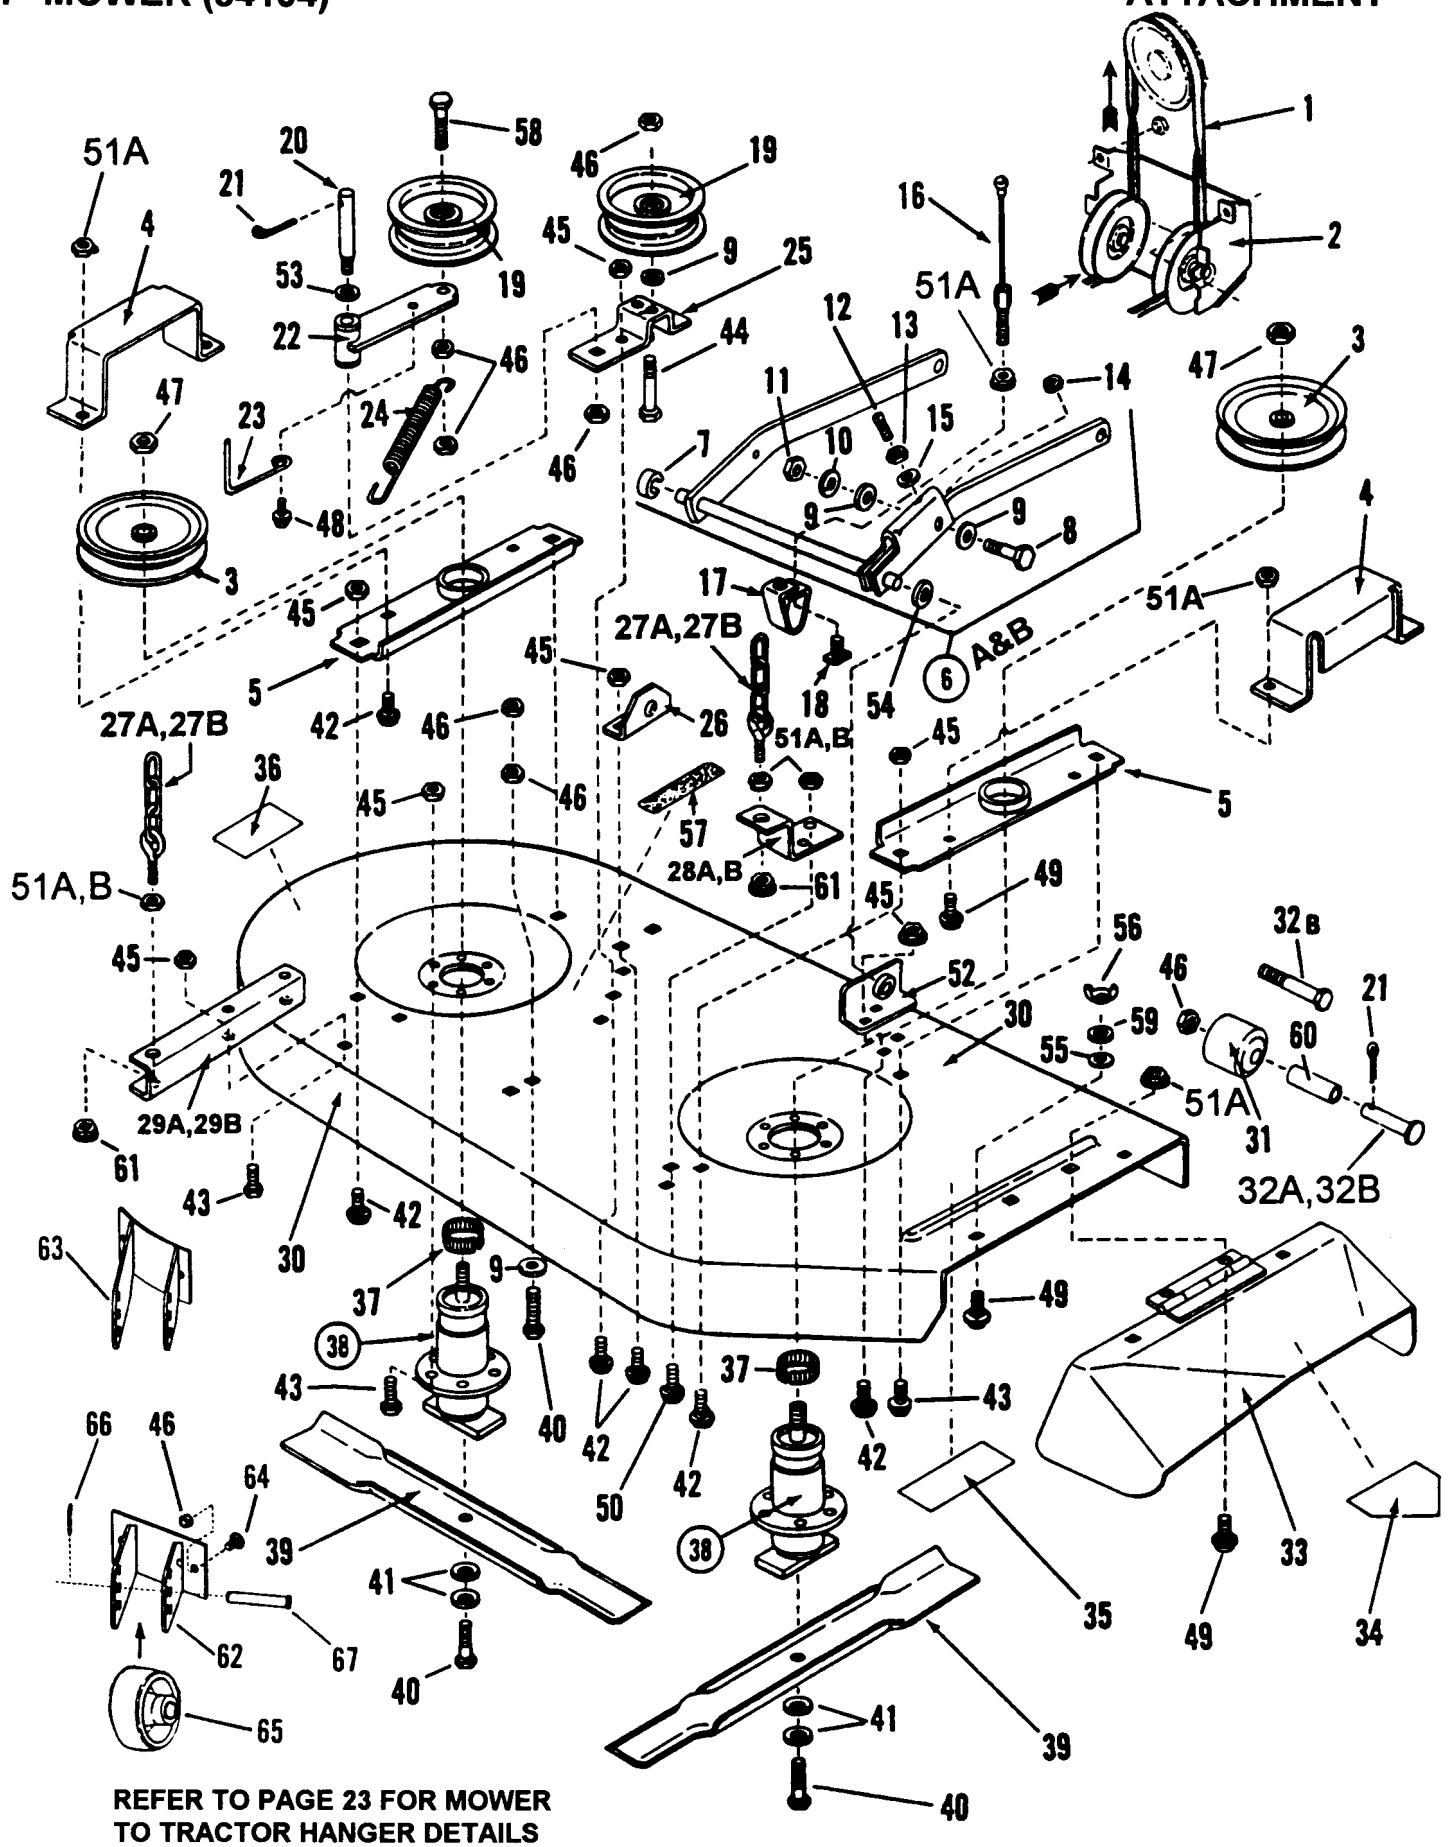

REFER TO PAGE 23 FOR MOWER TO TRACTOR HANGER DETAILS

ITEM	PART NO.	DESCRIPTION
1	1-4800	BELT, 41" Mower (A137)
2	5-7362	ASSEMBLY, Mule Drive (See pg. 30 for part breakdown)
3	1-4397	PULLEY, 5-3/4" O.D. (2)
4	3-8080	GUARD, Pulley (2)
5	3-8078	BRACE, Spindle (2)
6	4-9724	ASY, Front Lift Arm (Incl. items 7 thru 15)
7	1-0996	RING, White
8	9-0163	SCREW, 3/8-24 x 1-1/4" Hex Hd. Cap, Gr. 2
9	9-0122	WASHER, 3/8 Flat (3)
10	9-0118	WASHER, 3/8 Split Lock
11	9-0155	NUT, 3/8-24 Hex, Grade 2
12	9-0210	SETSCREW, 5/16-18x1-1/4
13	9-0197	NUT, 5/16-18 Hex Jam
14	9-0196	NUT, 5/16-18 Hex
15	9-0188	WASHER, 5/16 Flat
16	1-4355	CABLE, Front Lift
17	3-8043	BRACKET, Fr. Lift Arm Hanger
18	9-0388	T-NUT, 5/16-18
19	1-8585	PULLEY, 4.1 O.D. (2)
20	1-4408	STUD, Idler (3/8-24)
21	9-0041	COTTER-PIN, 1/8 x 1"
22	5-1399	ASY, Idler Arm (Incl. two 1-4409 bushings & 1-3864)
23	1-4410	GUIDE, Belt
24	1-4513	SPRING, Idler Arm
25	3-8079	BRACKET, Idler
26	3-2297	BRACKET, Front Left Hanger
27A	5-1400	ASY, 5/16 Bolt/Chain (2)
27B	5-1525	ASY, 3/8 Bolt/Chain (2)
28A	3-2240	BRACKET, Rear Right Support
28B	5-1532	BRKT, Rear Rt. Supp. (1985)
29A	3-8077	BRACKET, Rear Left Support
29B	5-7385	BRKT, Rear Left Supp.(1985)
30	4-9960	MOWER DECK, 41"
31	1-9190	WHEEL, Anti-Scalping (2)
32A	1-4472	PIN, 1/2 O.D. (Gage Wheel, item 31, on early prod.) (2)
32B	9-0859	SCREW, 3/8-24 x 3-3/4" Hex Head Cap, Grade 5 (2)
33	5-1401	DEFLECTOR, (Side Chute) (Includes Decal, item 34)
34	1-3010	DECAL, Danger (Cut Finger)
35	1-4852	DECAL, Caution (Deflector)
36	1-4853	DECAL, Caution (Rot. Blades)
37	1-2670	RING, Tolerance, 3/4" (2)
38	5-1473	ASY, Spindle (refer to pg. 28)
39	1-9710	BLADE, 21" Cutter (2)
40	9-0824	SCREW, 3/8-24 x 1-1/4" Hex Head Cap, Grade 5 (3)
41	1-2063	CONE-WASHER (4)
42	9-0136	BOLT, 3/8-16 x 3/4" Square Neck Carriage, Grade 2 (9)
43	9-0612	BOLT, 3/8-16 x 3/4" HFL (9)
44	9-0483	SCREW, 3/8-24 x 1-3/4" Hex Head cap, Grade 5 (2)
45	9-0613	NUT, 3/8-16 Hex Fl. Lock (18)
46	9-0289	NUT, 3/8-24 Hex Ctr. Lk.(12)
47	9-0820	NUT, 3/4-16 Jam Lock (2)
48	9-0741	SCREW, 1/4-20 x 5/8" HWST
49*	9-0799	BOLT, 5/16-18 x 5/8" Square Neck Carriage, Grade 5 (8)
50	9-0721	BOLT, 5/16-18 x 1/2" Hex Flange Lock, Grade 5 (2)
51A*	9-0585	NUT, 5/16-18 Hex Flange Lock, Grade 5 (11)
51B	9-0665	NUT, 3/8-16 Hex Jam (11)
52	3-2362	BRACKET, Front Right Hanger (Welded early decks)
53	9-0183	WASHER, 5/8 Flat
54	1-0935	WASHER, Spacer
55	1-1791	RETAINER, 5/16 Bolt (2)
56*	9-0375	WING-NUT, 5/16-18 (2)
57	1-2929	PAD
58	9-0167	SCREW, 3/8-24 x 2" Hex Head Cap, Grade 5
59*	9-0187	WASHER, 5/16 Split Lock (2)
60	1-5272	SPACER (use with #32B)(2)
61	9-0672	NUT, 5/16-18 HF Top Lock (2)
62**	4-7863	BRACKET, R.H. Wheel
63**	4-7864	BRACKET, L.H. Wheel
64***	9-0292	SCREW, 3/8-24x3/4" HHC (4)
65**	1-8445	WHEEL, 6" O.D. (2)
66***	1-3844	HAIR-PIN (2)
67***	1-4857	PIN, 1/2 x 3" Clevis (2)

NOTE:

6-0593: HARDWARE BAG for Side Chute includes *marked items above.

6-0640: KIT, Rear Gage Wheel includes 6-0642 and **marked items above.

6-0642: HARDWARE BAG for 6-0640 includes ***marked items above.

6-0690: HARDWARE BAG for 41" and 48" Decks includes items 27B, 43, 51B, 54 and 66.

6-0591: HARDWARE BAG for 33" and 41" Decks includes items 27A, 45, 51A, 54, 61 and 66.

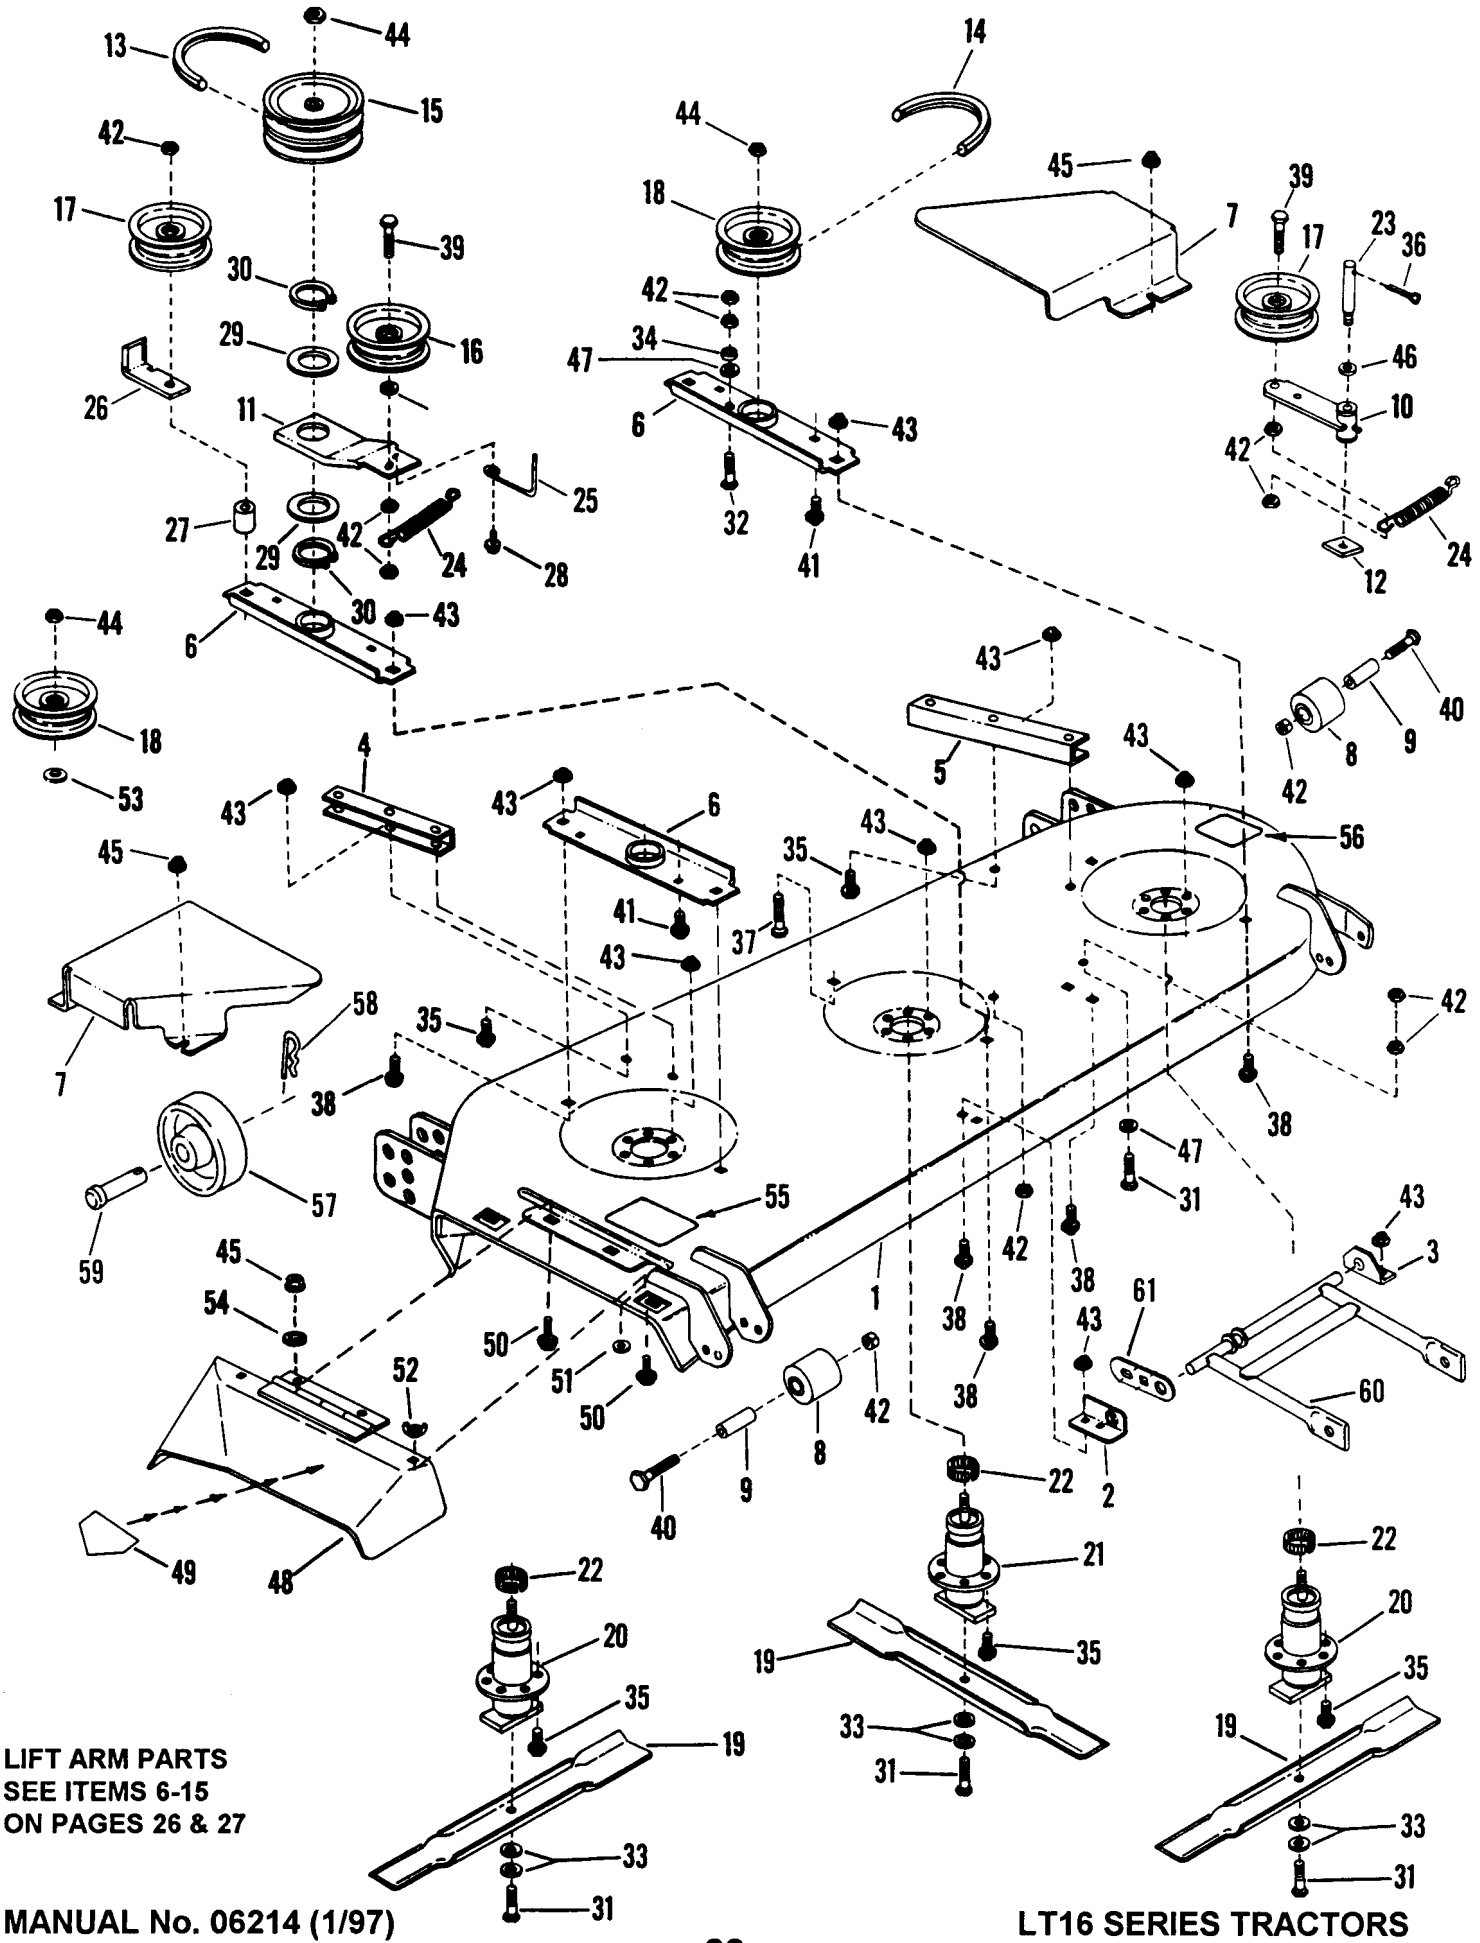
LIFT ARM PARTS
SEE ITEMS 6-15
ON PAGES 26 & 27

ITEM	PART NO.	DESCRIPTION
1	4-9961	DECK STRUCTURE- 48"
2A	3-2362	BRACKET, Right Front
2B	3-8181	BRACKET, Right Front (1985)
3	3-2297	BRACKET, Front Hanger
4A	3-8077	SUPPORT, Rear Right
4B	5-7384	SUPPORT, Rear Right (1985)
5A	3-8153	SUPPORT, Rear Left
5B	5-7383	SUPPORT, Rear Left (1985)
6	3-8078	BRACE, Spindle (3)
7	3-5054	GUARD, Pulley (2)
8	1-9190	ROLLER (2)
9	1-5272	SPACER (2)
10	5-1475	ASSEMBLY, Idler Arm
11	3-8156	IDLER ARM, Center
12	1-4805	WASHER- Square
13	1-4801	V-BELT, Drive- A92
14	2-4497	BELT, Deck- AA105
15	1-4545	PULLEY, Double (4-3/4")
16	1-8585	PULLEY, Flat Idler (4.8 O.D.)
17	1-8651	PULLEY, V-Idler (4-1/2" O.D.)
18	1-4544	PULLEY, 4-3/4" O.D. (2)
19	1-9733	BLADE, 16.5 (3)
20	5-1473	ASSEMBLY, Spindle (2) (See page 30 for breakdown)
21	5-1528	ASSEMBLY, Spindle (See page 31 for breakdown)
22	1-2670	TOLERANCE RING, 3/4" (3)
23	1-4408	IDLER STUD
24	1-4513	SPRING (2)
25	1-4410	BELT GUIDE
26	3-2368	BELT GUIDE
27	2-1945	SPACER
28	9-0741	SCREW, 1/4-20 x 5/8" Hex Washer Self-Tap
29	1-4795	WASHER, Plastic (2)
30	1-0740	RING, 2" Ext. Retaining (2)
31	9-0824	SCREW, 3/8-24 x 1-1/4" Hex Head Cap, Grade 5 (4)
32	9-0164	SCREW, 3/8-24 x 1-1/2" Hex Head Cap, Grade 2
33	1-2063	WASHER, Cone (6)
34	1-4527	SPACER
35	9-0612	BOLT, 3/8-16 x 3/4" Hex Flange Lock (13)
36	9-0041	PIN, 1/8 x 1" Cotter
37	9-0169	SCREW, 3/8-24 x 2-1/2" Hex Head Cap
38	9-0136	BOLT, 3/8-16 x 3/4" Square Neck Carriage, Grade 2 (9)
39	9-0167	SCREW, 3/8-24 x 2" Hex Head Cap, Grade 5
40	9-0859	SCREW, 3/8-24 x 3-3/4" Hex Head Cap, Grade 5 (2)
41	9-0799	BOLT, 5/16-18 x 5/8" Square Neck Carriage, Grade 5 (4)
42	9-0289	NUT, 3/8-24 Hex Ctr. Lock (8)
43	9-0613	NUT, 3/8-16 Hex Fl. Lock (22)
44	9-0820	NUT, 3/4-16 Hex Jam (3)
45*	9-0585	NUT, 5/16-18 Hex Fl. Lock (4)
46	9-0183	WASHER, 5/8 SAE
47	9-0122	WASHER, 3/8 SAE (2)
48	5-1401	ASSEMBLY, Side Chute (Includes item 49)
49	1-3010	DECAL, Danger
50*	9-0799	BOLT, 5/16-18 x 5/8" Square Neck Carriage, Grade 5 (6)
51*	9-0187	WASHER, 5/16 Split Lock (2)
52*	9-0375	WING-NUT, 5/16-18 (2)
53	1-0935	WASHER, 3/4 I.D. (4)
54	1-1791	RETAINER, 5/16 Bolt (2)
55	1-4852	DECAL, Caution
56	1-4853	DECAL, Caution
57	1-8445	WHEEL, 6" O.D. (2)
58	1-3844	HAIR-PIN (2)
59	1-4857	PIN, 1/2 x 3" Clevis (3)
60	4-9724	LIFT ARM, Front
61	3-2432	ADJUSTMENT, Link
62	1-5012	RING, Adjustment
63*	9-0600	WASHER, 3/8 Flat

NOTE:

6-0593: HARDWARE BAG for Side Chute includes *marked items above.

6-0690: HARDWARE BAG for 41" and 48" Decks includes items 35, 53, 58 as well as 5-1525 (Bolt & Chain Assembly) and 9-0665 (3/8-16 Hex Jam Nut)

MULE DRIVE ASSEMBLY

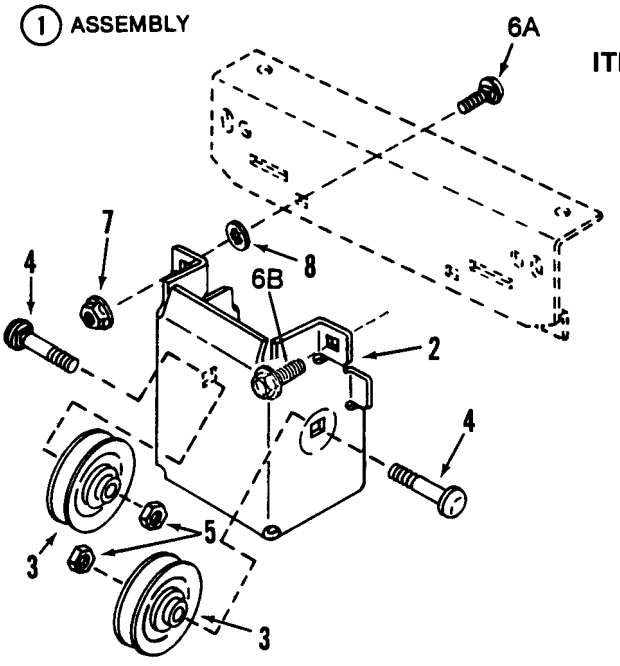

ITEM	PART NO.	DESCRIPTION
1	5-7362	ASSEMBLY, Mule Drive (Includes items 2 thru 8)
2	4-7860	BRACKET, Mule Drive
3	1-8651	PULLEY, Belt Idler (2)
4	9-0791	BOLT, 3/8-16 x 1-1/2" Short Square Neck Carriage, Grade 5 (2)
5	9-0499	NUT, 3/8-16 Hex Top Lock (2)
6A*	9-0850	BOLT, 3/8-16 x 3/4" Square Neck Carriage, Grade 2
6B	9-0612	BOLT, 3/8-16 x 3/4" Hex Flange Lock
7*	9-0613	NUT, 3/8-16 Hex Flange Lock
8*	1-3847	RETAINER, 3/8 Bolt

SPINDLE ASSEMBLY (41" & 48" OUTBOARD)

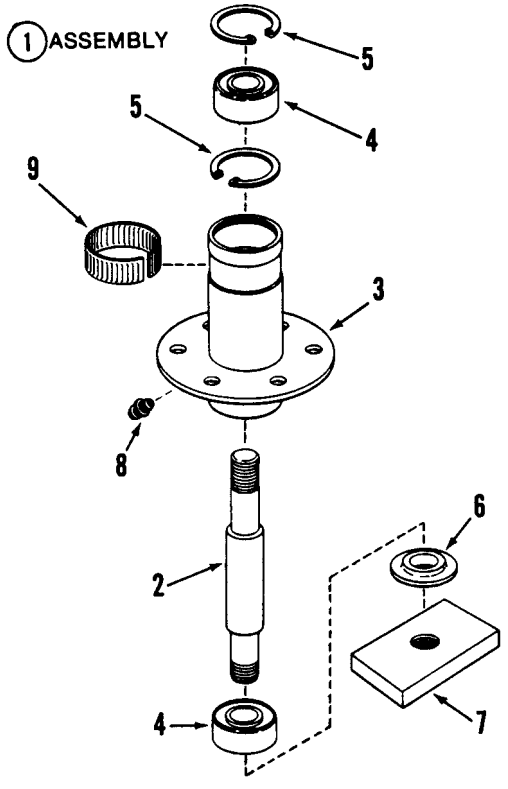

ITEM	PART NO.	DESCRIPTION
1	5-1473	ASSEMBLY, Spindle (Includes items 2 thru 7)
2	2-7632	SPINDLE 6.06" Long
3	5-1472	HOUSING, Spindle (Incl. Item 8)
4	1-3313	BEARING, Spindle (2)
5	1-2491	RING, Retaining (2)
6	1-4407	WASHER, Spindle
7	3-2294	HOLDER, Blade
8	1-0817	FITTING, Lube
9*	1-2670	RING, Tolerance

*Order Separately

SPINDLE ASSEMBLY (48" CENTER)

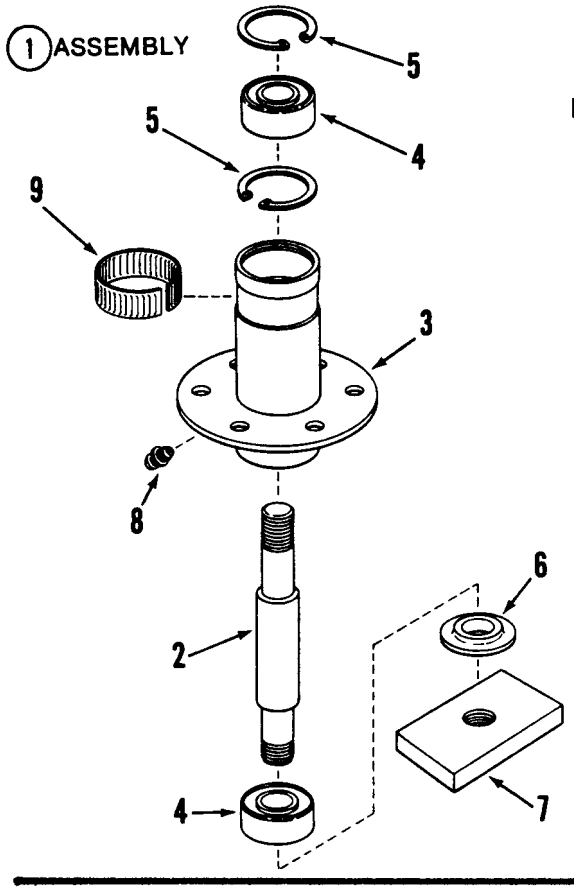

ITEM	PART NO.	DESCRIPTION
1	5-1528	ASSEMBLY, Spindle
		(Includes Items 2 thru 7)
2	2-7641	SPINDLE, 7.25"
3	5-1527	HOUSING, Spindle (Incl. Item 8)
4	1-3313	BEARING, Spindle
5	1-2491	RING, Retaining (2)
6	1-4407	WASHER, Spindle
7	3-2294	HOLDER, Blade
8	1-0817	FITTING, Lube
9*	1-2670	RING, Tolerance
		*Order Separately

ELECTRIC CLUTCH ASSEMBLY

(1) KIT, ELECTRIC CLUTCH

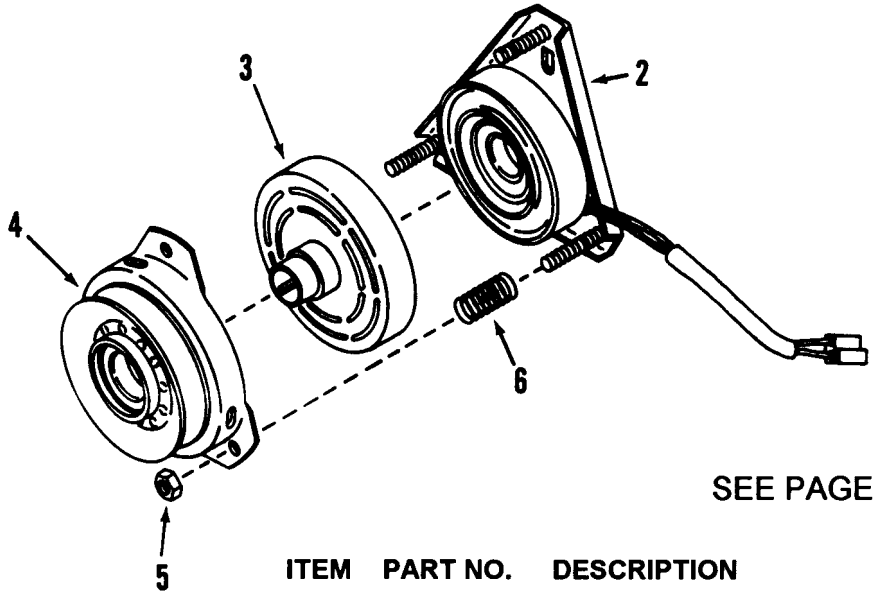

SEE PAGE 8 for Clutch Retaining Hardware

ITEM	PART NO.	DESCRIPTION
1	1-9982	KIT, Electric Clutch (Includes the Following items for Snapper #1-9982 Warner Electric Model I-5210-3)
2	1-4947	FIELD COIL (Includes Ball Bearing)
3	1-4948	ROTOR
4	1-4949	ASSEMBLY, Arm-Pulley (Includes Ball Bearing)
5	9-0854	NUT, 3/8-24 Hex Nylok (3)
6	1-4950	COIL SPRING (3)

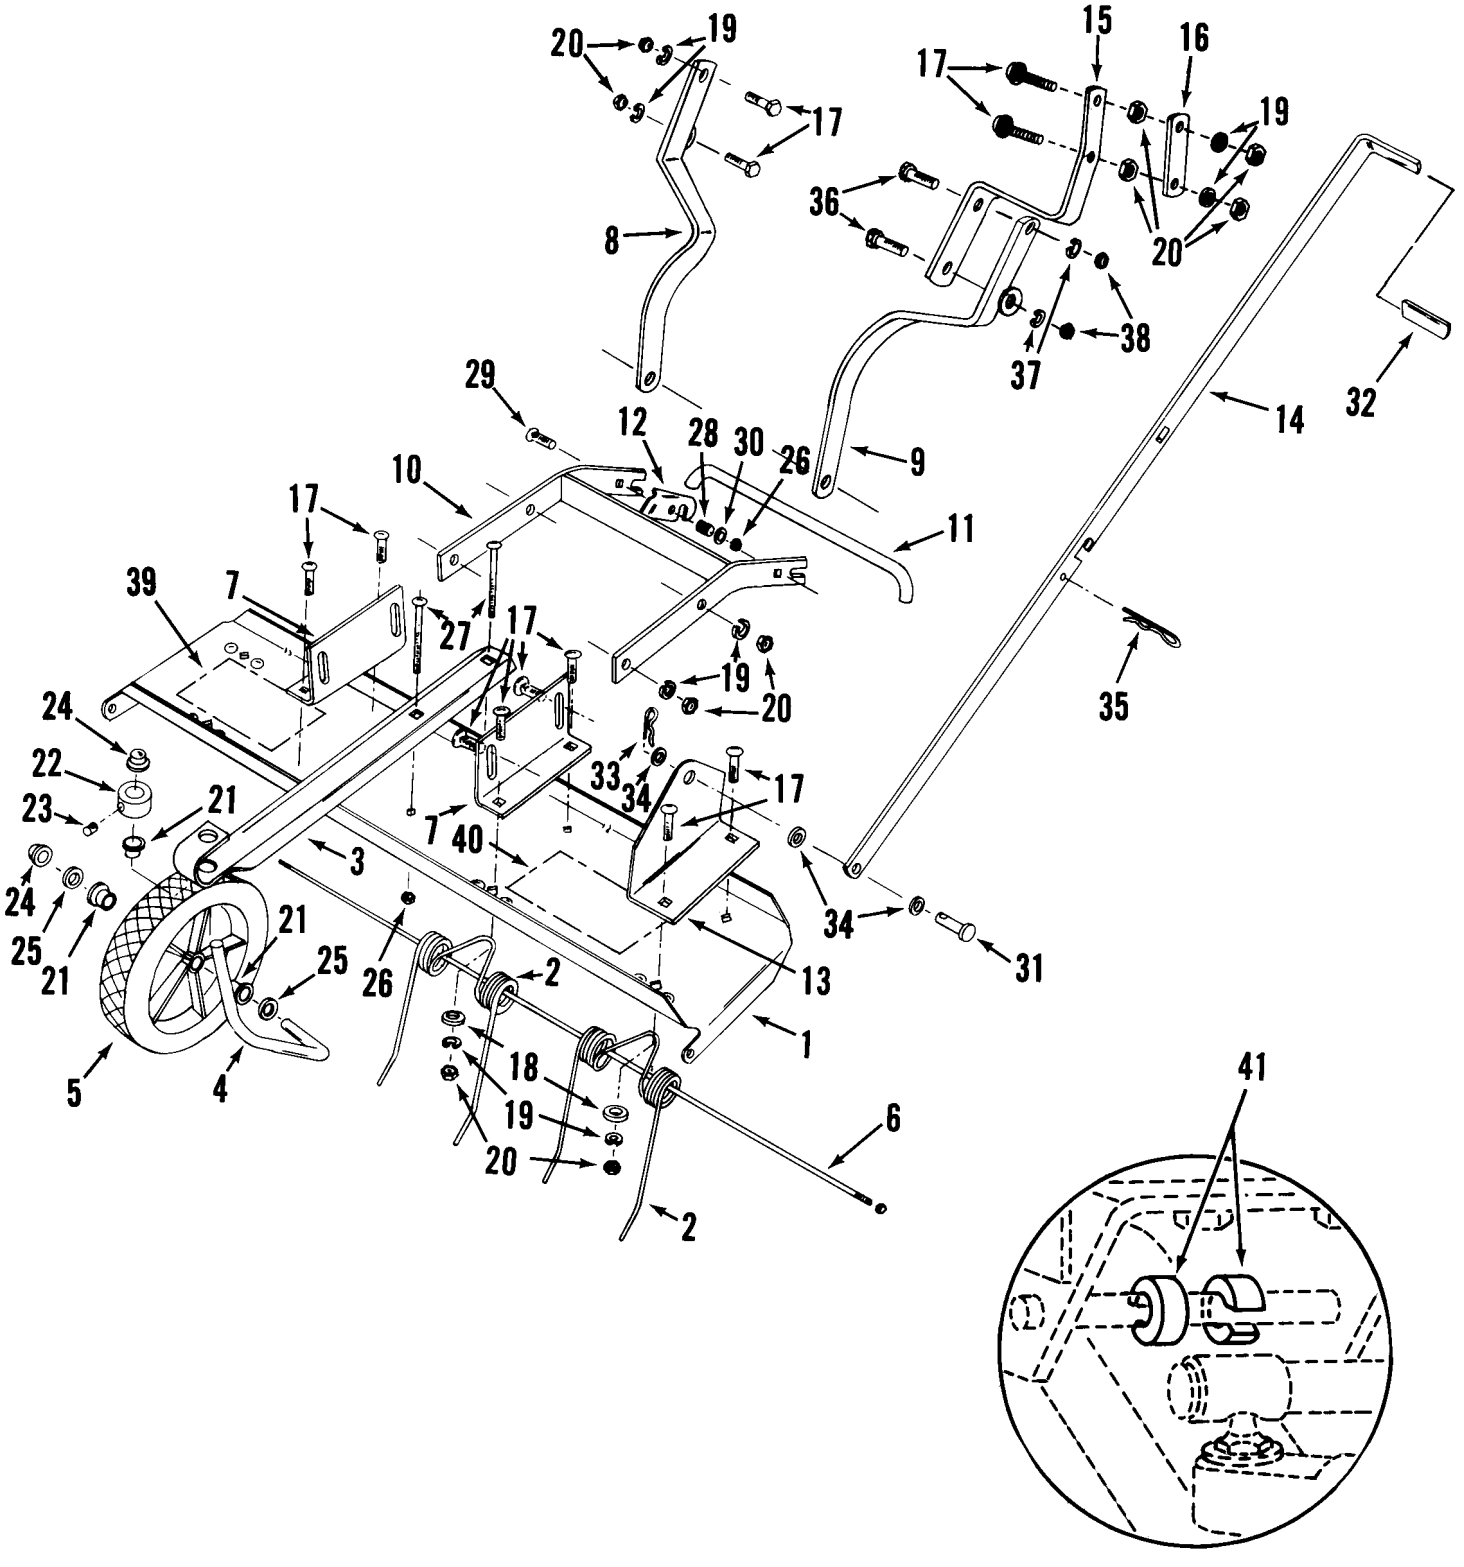
20
19
17
8
15
16
17
19
36
20
38
37
32
14
29
12
28
30
26
9
10
11
17
39
7
27
17
19
20
35
24
22
23
21
33
34
17
7
40
3
24
25
21
21
25
26
2
13
34
31
1
5
4
18
19
20
6
2
41

ITEM	PART NO.	DESCRIPTION
1	1-9947	TRAY, Tine
2	1-8491	TINE, Thatching (8)
3	1-8700	SUPPORT, Wheel
4	1-8493	AXLE
5	1-8189	WHEEL, Gauge
6	1-4110	ROD, Tine (2)
7	1-4778	BRACKET, Frame Mounting (2)
8	1-9750	BAR, Tractor Mounting, RH
9	1-9749	BAR, Tractor Mounting, LH
10	1-4781	ASSEMBLY, Main Frame Weldment
11	1-4783	ROD, Mounting
12**	1-4113	LATCH, Frame Mount (2)
13	1-8666	BRACKET, Lift
14	1-8664	HANDLE, Lift
15	1-8665	BRACKET, Lift Handle Support
16**	1-4780	STRAP, Handle Retaining
17*	9-0383	BOLT, 5/16-18 x 1"Square Neck Carriage, Grade 5 (17)
18*	1-4098	WASHER, Reinforcing (8)
19*	9-0187	WASHER, 5/16 Split Lock (17)
20*	9-0196	NUT, 5/16-18 Hex (19)
21**	1-4342	BEARING, Nyliner (4)
22**	1-4100	BUSHING, Wheel Adjustment
23**	1-4103	SCREW, 5/16-18 x 1/4" Set
24**	1-4101	NUT, 1/2" Push (2)
25*	9-0250	WASHER, 1/2 SAE (2)
26*	9-0761	NUT, 1/4-20 Hex Top Lock (8)
27*	9-0015	BOLT, 1/4-20 x 1-3/4" Square Neck Carriage (2)
28**	1-4114	SPING, Compression (2)
29*	9-0078	BOLT, 1/4-20 x 1-1/4" Square Neck Cariage, Grade 2 (2)
30*	9-0598	WASHER, 1/4 SAE (2)
31**	1-4779	PIN, 5/16 Clevis
32**	1-4784	GRIP, Handle
33**	1-3113	COTTER, Hairpin
34*	9-0692	WASHER, 5/16 SAE (3)
35**	1-2867	COTTER, Hairpin
36*	9-0143	BOLT, 3/8-16 x 1-1/4" Hex Head Cap, Grade 5 (4)
37*	9-0118	WASHER, 3/8 Split Lock (4)
38*	9-0130	NUT, 3/8-16 Hex, Grade 5 (4)
39	1-4062	DECAL, Logo
40	1-4785	DECAL, Adjustment
41**	1-1780	RING, Spacer (2)
--	6-0648	BAG, Hardware for 6-0600 (Incl *marked items)
--	6-0656	BAG, Hardware for 6-0656 (Incl **marked items)

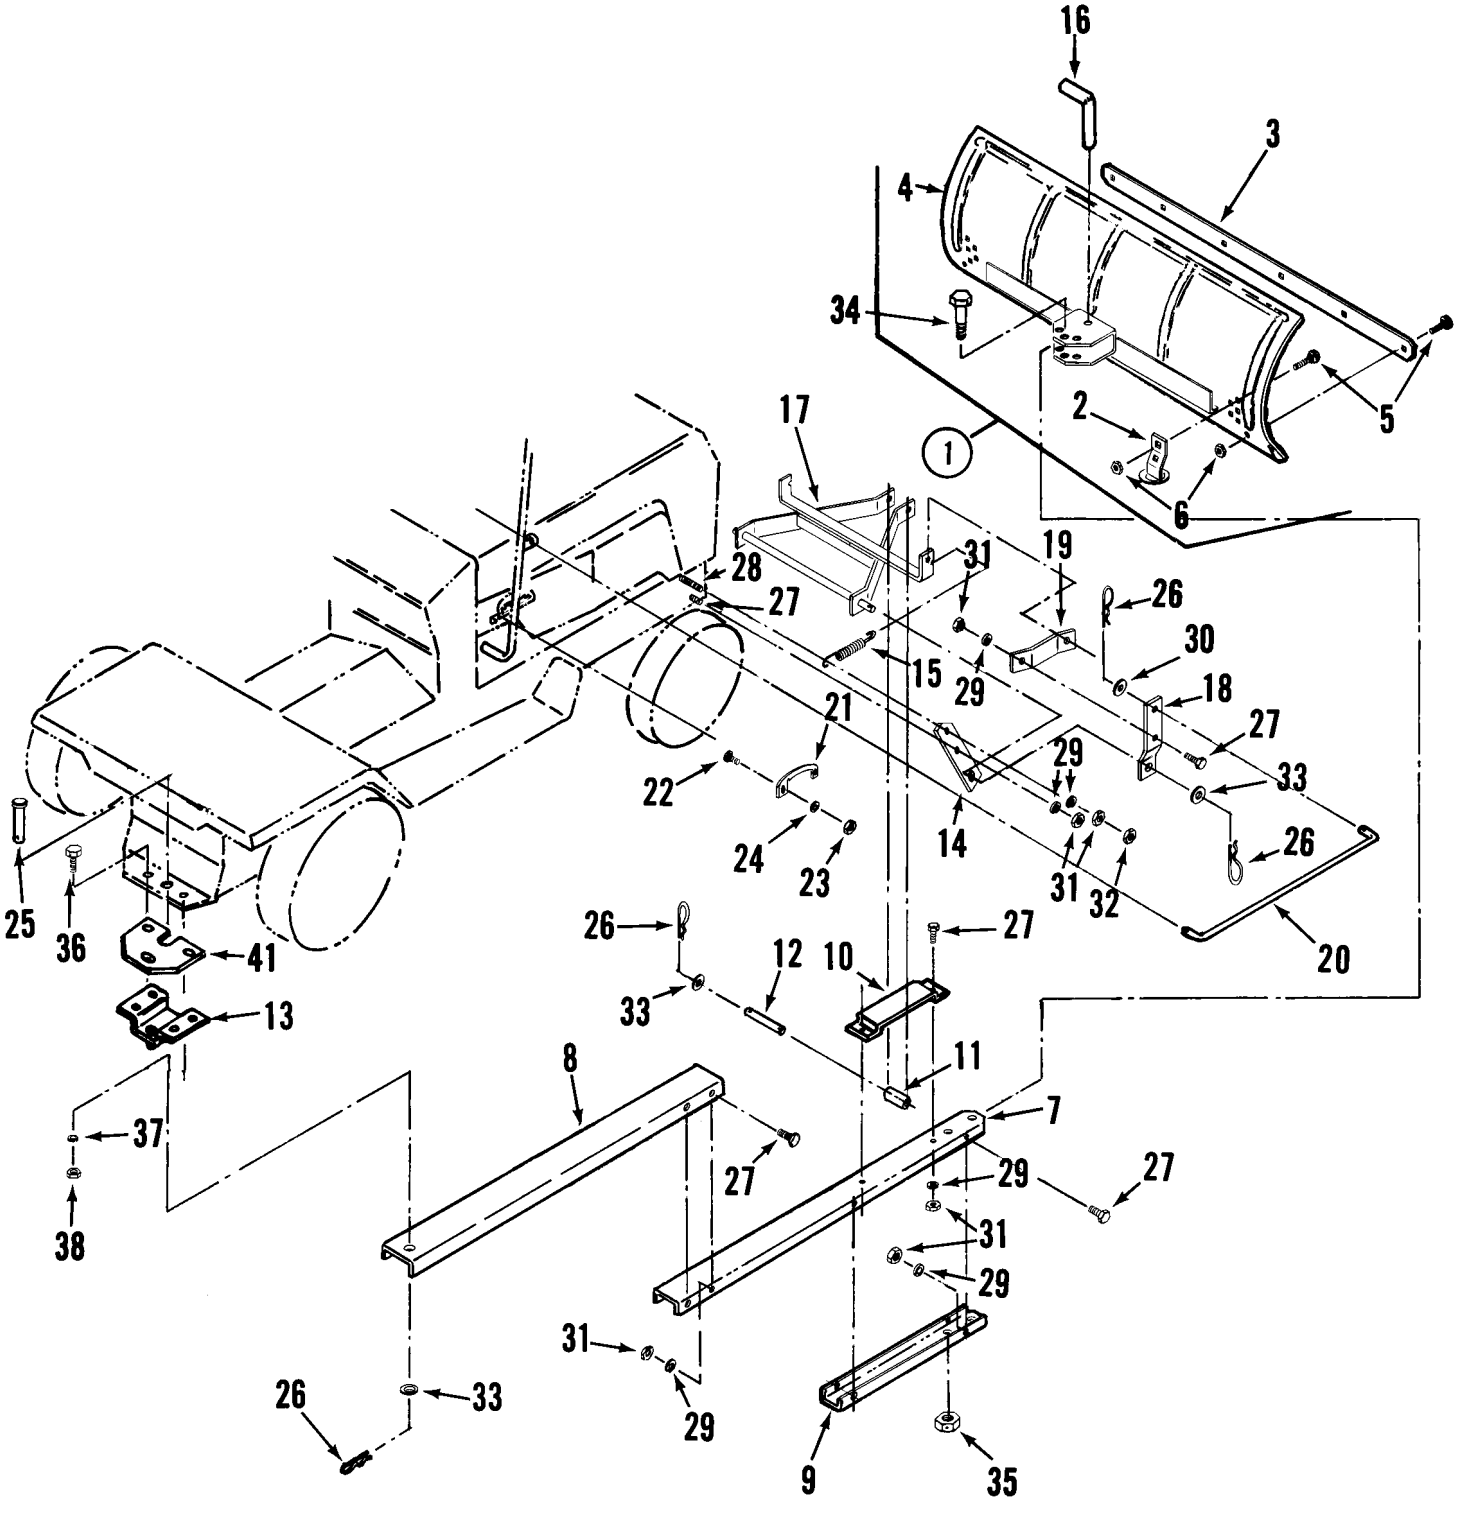
16
3
4
34
5
2
1
6
17
28
27
31
19
26
30
18
27
15
29
21
22
24
23
14
29
33
26
31
32
20
25
36
41
13
26
33
12
10
27
11
8
7
37
38
27
29
27
31
29
31
29
26
33
9
35

ITEM	PART NO.	DESCRIPTION
1^	5-7361	ASSEMBLY, 42' Blade (Includes items 2 thru 6)
2	4-0445	STRUCTURE, Slide (2)
3	3-8145	SCRAPER
4	4-7859	BLADE
5	9-0136	BOLT, 3/8-16 x 3/4" Square Neck Carriage, Gr. 2 (9)
6+	9-0546	NUT, 3/8-16 Hex Center Lock, Grade B or 5 (9)
7^	3-6113	BEAM, Front
8^	3-6114	BEAM, Rear
9	3-8147	PLATE, Front Hitch
10	3-8148	BRACKET, Lift
11	2-1940	ROLLER, Lift
12	2-1941	PIN, Lift Roller
13+	4-0521	HITCH WELDMENT, Rear Yoke
14	3-2390	PLATE, Side Support (2)
15	1-4405	SPRING, Lift Assist (2)
16	3-2391	PIN, Latch
17	4-9718	STRUCTURE, Lift Yoke
18	3-8152	ARM, Lift
19	3-8150	LINK
20^	2-1938	ROD, Operating
21	3-2397	PLATE, Quadrant Lockout (Includes Items 22 thru 24)
22*	9-0803	BOLT, 1/4-20 x 5/8" Flat Head Carriage (2)
23*	9-0063	NUT, 1/4-20 Hex (2)
24*	9-0053	WASHER, 1/4 Internal Tooth Lock (2)
25	1-1768	PIN, 1/2 x 2" Clevis
26	1-3844	PIN, Hair Cotter (6)
27*	9-0563	SCREW, 3/8-3/8-16 x 1" Hex Head Cap, Grade 5 (14)
28*	9-0655	SCREW, 3/8-16 x 1-1/2" Hex head Cap, Grade 5 (2)
29*	9-0118	WASHER, 3/8 Split Lock (16)
30*	9-0122	WASHER, 3/8 Flat (2)
31*	9-0130	NUT, 3/8-16 Hex, Grade 5 (16)
32+	9-0546	NUT, 3/8-16 Hex Center Lock, Grade B or 5 (2)
33*	9-0250	WASHER, 1/2 Flat (4)
34*	9-0017	SCREW, 1/2-20 x 2-3/4" Hex Head Cap
35*	9-0393	NUT, 1/2-20 Nyloc
36	9-0206	SCREW, 5/16-18 x 3/4" Hex Head Cap, Grade 2 (2)
37*	9-0187	WASHER, 5/16 Split Lock (2)
38*	9-0196	NUT, 5/16-18 Hex (2)
39+	9-0747	BOLT, 3/8-16 x 1" Square Neck Carriage, Grade 2 (4)
40	6-0634	BAG, Hardware (Includes * marked items)
41+	3-2452	DRAWBAR, Short, Auxilliary
42	6-0722	KIT, Dozer Adapter, Long Frame (Includes + marked items)
43+	3-2456	CLIP, Dozer Blade
44*+	9-0209	SCREW, 5/16-18 x 3/4" Hex Head Cap, Grade 2
45	6-0629	PARTS BOX for 6-0629 (Includes ^ marked items)

#6-0659 REAR WEIGHT KIT for SNAPPER LT SERIES TRACTORS

This kit allows adding two 38 pound (each) weights behind the rear wheels of Snapper Lawn Tractors for additional traction with Snow Thrower and Dozer Blade attachments. Install kit components as follows:

INSTALLATION INSTRUCTIONS

STEP 1: Remove rear cover plate to replace top bolts. Install the two 5/16x1 hex head capscrews with heads inside in holes shown then reinstall plate.

STEP 2: Attach the weight support frame to the hitch plate with two 5/16 1 carriage bolts, 5/16 split lockwashers and 5/16 hex nuts.

STEP 3: Attach the two supports to the two upper bolts of the cover plates and secure with two 5/16 split lockwashers and 5/16 hex nuts. Do not completely tighten at this time.

STEP 4: Place the weights on the frame, move the supports into position with holes aligned with those in the frame.

STEP 5: Place a 3/8 flat washer, 3/8 split lock washer and 3/8" hex nut over one end of each of the 3/8x16 all thread bolts, insert the bolts thru the weights, place retainer plate on inside and secure with two 3/8 split lockwashers and 3/8 hex nuts. Completely tighten upper brace and weight retainer hardware to complete the installation.

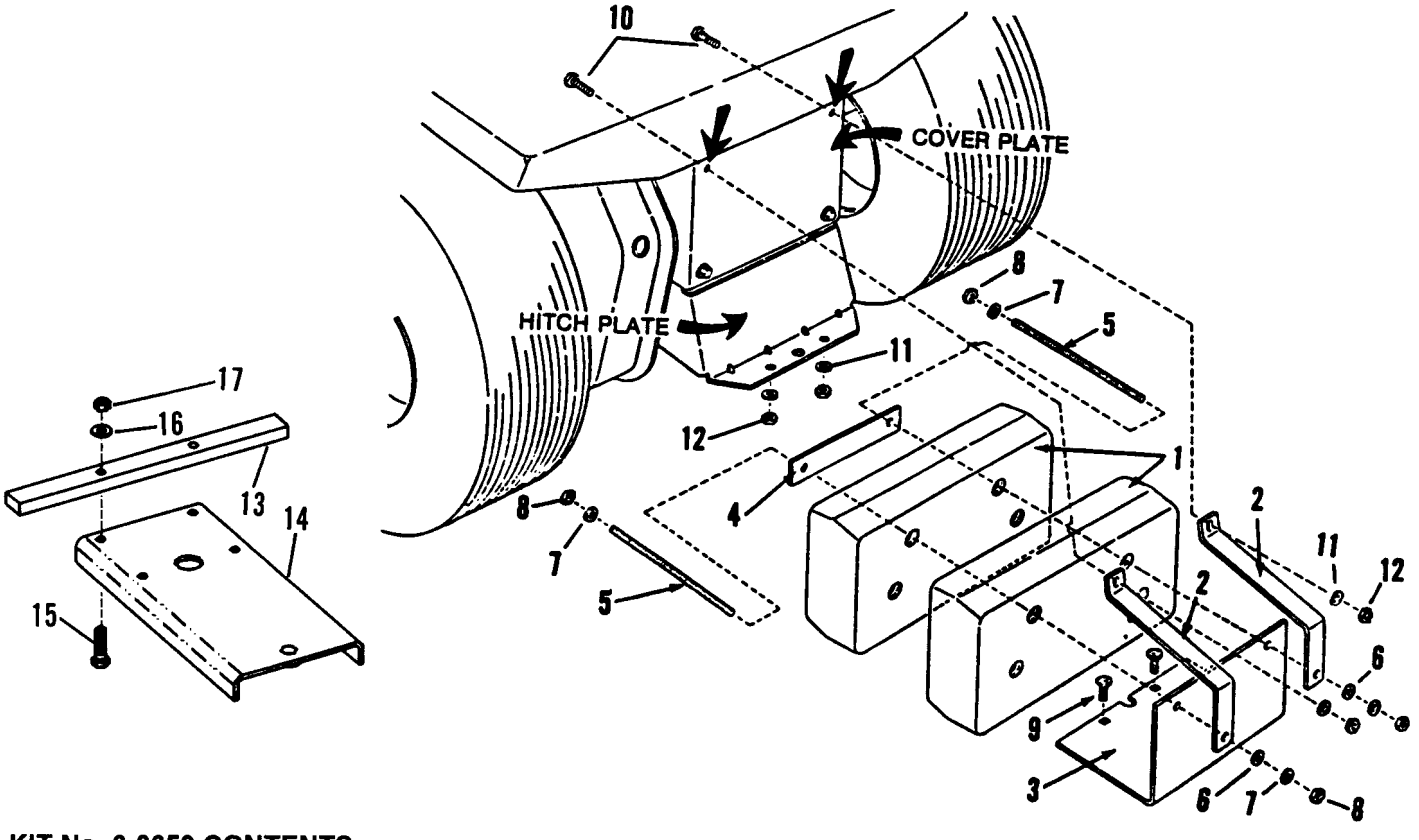

KIT No. 6-0659 CONTENTS

ITEM	PART NO.	DESCRIPTION
1	1-9759	WEIGHT, 38 Pound (2)
2	3-8176	SUPPORT (2)
3	3-8175	FRAME
4	3-2442	PLATE, Retainer
5	1-5002	STUD, 3/8-16 x 9" (2)
6	9-0122	WASHER, 3/8 Flat (2)
7	9-0118	WASHER, 3/8 Split Lock (4)
8	9-0130	NUT, 3/8-16 Hex (4)
9	9-0208	BOLT, 5/16-18 x 1" Square
10	9-0209	SCREW, 5/16-18 x 1" Hex Head Cap, Grade 2 (2)

ITEM	PART NO.	DESCRIPTION
11	9-0187	WASHER, 5/16 Split Lock (4)
12	9-0196	NUT, 5/16-18 Hex (4)
13*	3-2454	CROSS SUPPORT
14*	3-8204	DRAWBAR, Aux. (Long)
15*	9-0627	BOLT, 5/16-18 x 1-1/4" Hex Head Cap, Grade 5 (4)
16*	9-0187	WASHER, 5/16 Split Lock (16)
17*	9-0196	NUT, 5/16-18 (17)
18	6-0711	KIT, Drawbar Extension (Includes * marked items)

NOTES

Parts Manual for

SNAPPER®

LT16 SERIES 1 TRACTORS

SNAPPER® McDonough, GA., 30253 U.S.A.

MANUAL No. 06214 (1/97 ISSUE) Printed in U.S.A.